

Honda VFR800 1998-2006 (SH-V4 + SH-H01)


Secure the bike on a stand.



Remove the seat.

Remove the left side fairing.

Locate the vehicle speed sensor connectors in a dust boot.

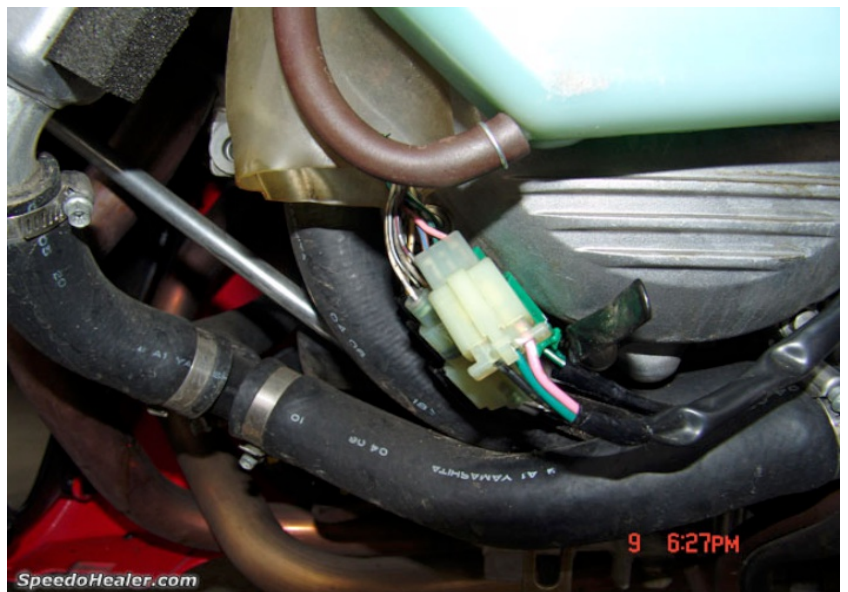

Plug the SpeedoHealer connectors in-line with the vehicle speed sensor connectors.



SpeedoHealer

Supplementary Manual



Honda VFR800 1998-2006 (SH-V4 + SH-H01)

Typical position for the SpeedoHealer.

Secure the unit properly.

