

Honda VFR800 Interceptor ABS 2007-2013 (SH-V4 + SH-H03)

Secure the bike on a stand.



Remove the seat and the left side fairing.




Locate the vehicle speed sensor connectors.

(Transparent, 3-pole connector)



Honda VFR800 Interceptor ABS 2007-2013 (SH-V4 + SH-H03)

Plug the SpeedoHealer connectors in-line with the vehicle speed sensor connectors.

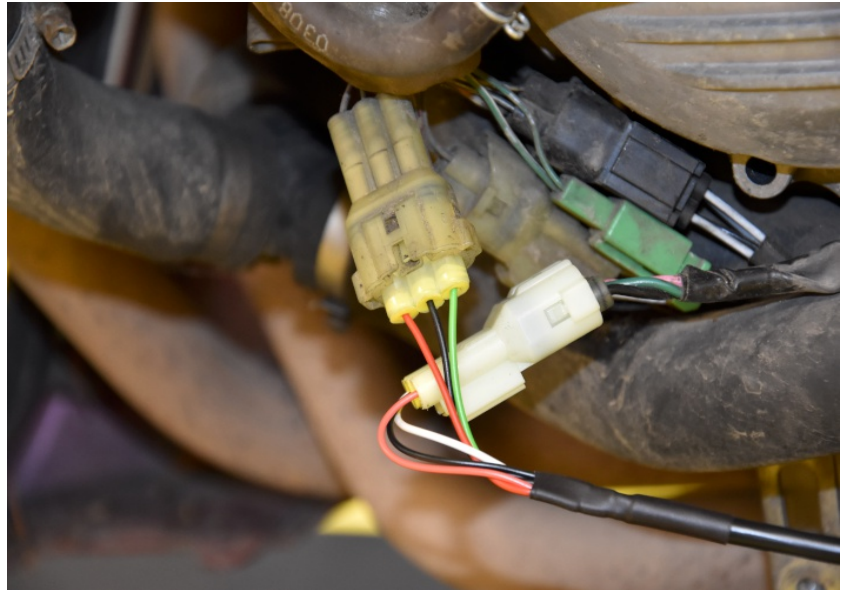

Typical position for the remote button.



Typical position for the SpeedoHealer.

Secure the unit properly.

