

Honda CB1000 Hornet ABS TC SP 2025- (SH-V4 + SH-U01)

Secure the bike on a stand.



Remove the plastic cover from the dashboard.

Locate the 36-pole dashboard connector.


Cut the Black/Red wire of the connector.(Pin #13)

Splice the SpeedoHealer Green wire to the Black/Red wire end, which goes to the dashboard connector.

Splice the SpeedoHealer White wire to the Black/Red wire end, which is at the wiring harness side.



Splice the SpeedoHealer Red wire to the Black/Red wire.(Pin #18)

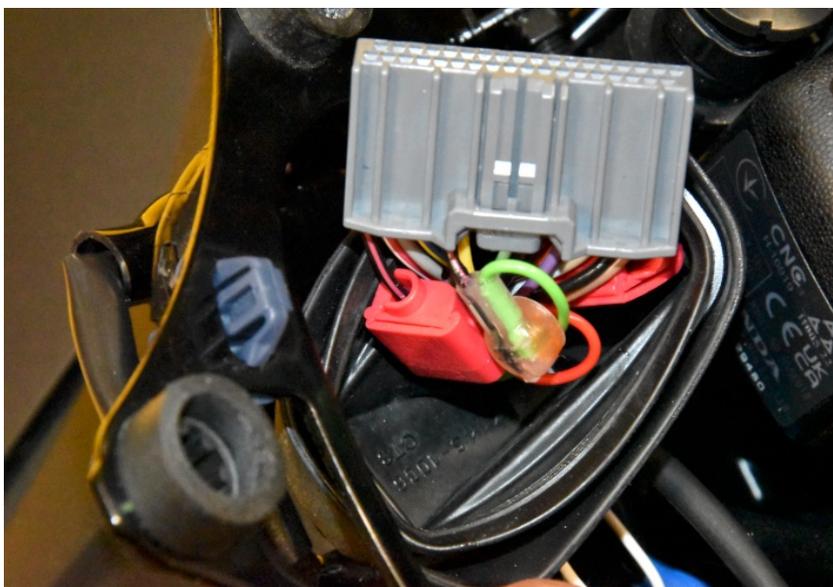

SpeedoHealer Supplementary Manual



Honda CB1000 Hornet ABS TC SP 2025- (SH-V4 + SH-U01)

Splice the SpeedoHealer Black wire to the Green ground wire.(Pin #1)



Typical position for the remote button.



Typical position for the SpeedoHealer.

Secure the unit properly.

