


Honda CBR1000RR ABS SP/SP2 2017- (SH-V4 + SH-U01)

Remove the seat.

Remove the fairings around the fuel tank and locate the ABS ECU connector.


Unplug the connector.

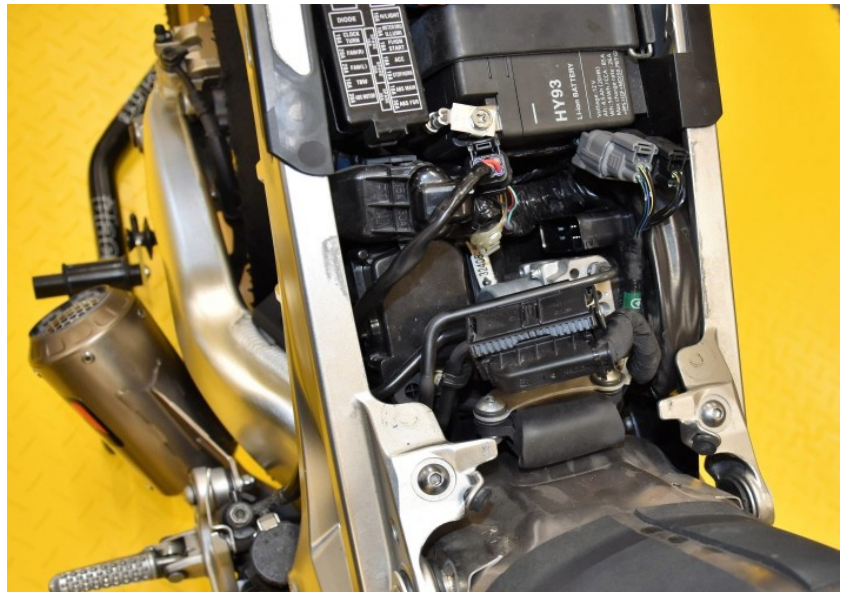

Cut the Black wire from the ABS ECU connector.

Connect the SpeedoHealer White wire to the Black wire end, which goes to the ABS ECU connector.

Connect the SpeedoHealer Green wire to the Black wire end, which is at the wiring harness side.

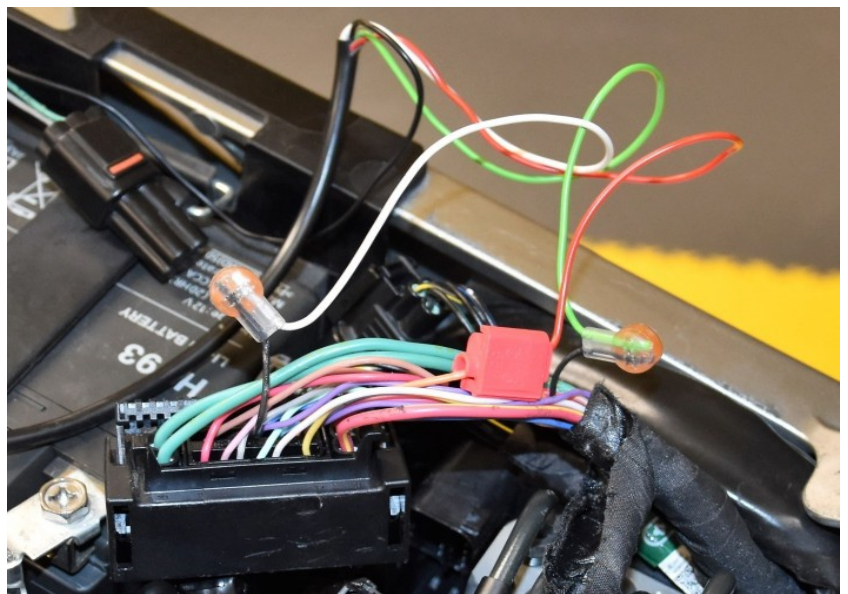

Splice the SpeedoHealer Red wire to the Orange wire of the ABS ECU connector.



Honda CBR1000RR ABS SP/SP2 2017- (SH-V4 + SH-U01)

Splice the SpeedoHealer Black wire to the Green wire of the option connector.

(Black, 4-pole connector under the seat, on the left side in a dust boot.)



Typical position for the SpeedoHealer.

Secure the unit properly.

