


# SpeedoHealer

## Supplementary Manual



### Honda VFR1200F non-DCT 2010-2015 (SH-V4 + SH-U01)

Remove the fairing from the right side.

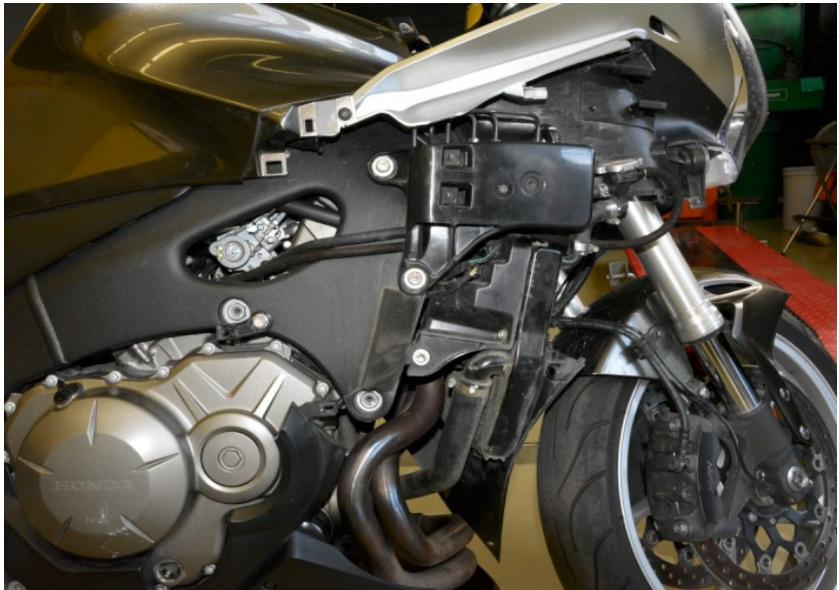

Unplug the ABS ECU connector.

*(Black connector behind the ABS unit on the right side)*



Cut the Pink/Green wire.




# SpeedoHealer

## Supplementary Manual



### Honda VFR1200F non-DCT 2010-2015 (SH-V4 + SH-U01)


Connect the SpeedoHealer White wire to the Pink/Green wire end, which goes to the ABS ECU connector.

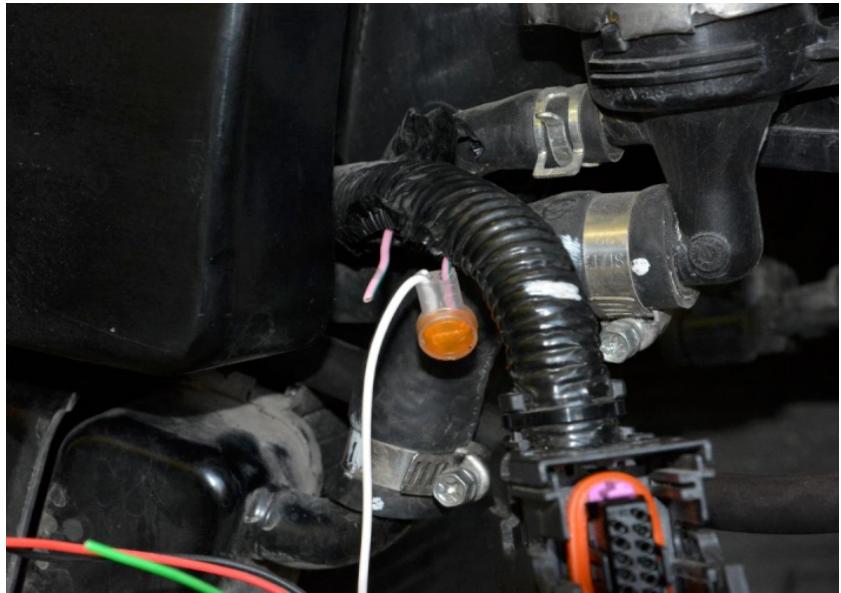

Connect the SpeedoHealer Green wire to the Pink/Green wire end, which is at the wiring harness side.



Connect the SpeedoHealer Red wire to the Orange/Blue wire.

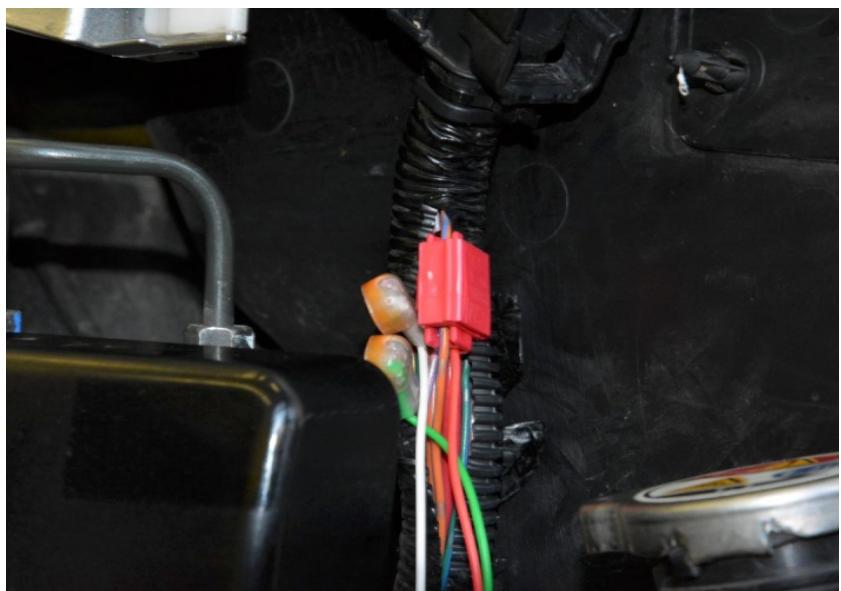

# SpeedoHealer

## Supplementary Manual



### Honda VFR1200F non-DCT 2010-2015 (SH-V4 + SH-U01)

Connect the SpeedoHealer Black wire to the chassis ground.



Typical position for remote button.



Typical position for the SpeedoHealer.

Secure the unit properly.

#### Attention:

*The bike is top speed limited. When the SH is installed this way, the speed limit point is raised by the same amount as the calibration factor. E.g. -9.5% calibration will make the speedometer accurate and raise the speed limiter by 9.5%*

