

Honda VFR1200X Crosstourer 2012- (SH-V4 + SH-U01)


Secure the bike on a stand.



Remove the seat and remove the side fairings.



Locate the Black dashboard connector on the left side.

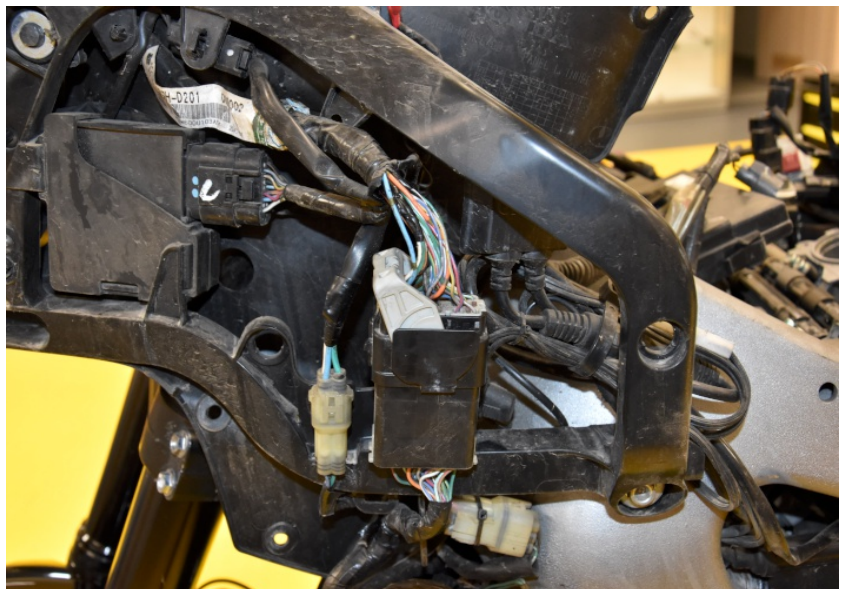

Honda VFR1200X Crosstourer 2012- (SH-V4 + SH-U01)

Cut the Pink/Green wire about 4cm (1.5") away from the connector.

Connect the SpeedoHealer White wire to the Pink/Green wire end, which is at the wiring harness side.

Connect the SpeedoHealer Green wire to the Pink/Green wire end, which goes to the dashboard.



Splice the SpeedoHealer Red wire to the Black/White wire.



Splice the SpeedoHealer Black wire to the Green wire.



Honda VFR1200X Crosstourer 2012- (SH-V4 + SH-U01)

Typical position for remote button.



Typical position for the SpeedoHealer.

Secure the unit properly.

