

Indian Scout 1200 2019- (SH-V4 + SH-U01)

Secure the bike on a stand.

Remove the main seat.



Locate the speed sensor connector.

(Black, 3-pole connector, left side below the main seat.)



Cut the Green/Brown wire about 4cm (1.5") away from the speed sensor connector.

Splice the SH Green wire to the Green/Brown wire end, which goes to the main wiring harness side.


Splice the SH White wire to the Green/Brown wire end, which goes to the sensor connector.



Indian Scout 1200 2019- (SH-V4 + SH-U01)

Splice the SH Red wire to the Violet wire of the sensor connector.

Splice the SH Black wire to the Black/White wire of the sensor connector.

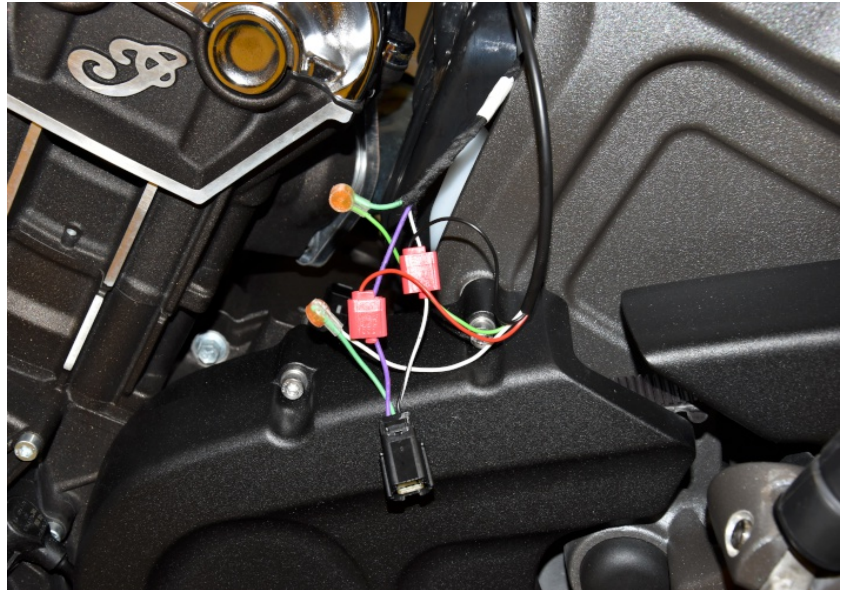

Recommended position for the SpeedoHealer.

Secure the unit properly.

