

Kawasaki Z900 2017- (SH-V4-C + SH-U01)

Secure the bike on a stand.



Remove the black plastic front fairing.




Locate the gray dashboard connector.



Kawasaki Z900 2017- (SH-V4-C + SH-U01)


Unplug the dashboard connector.

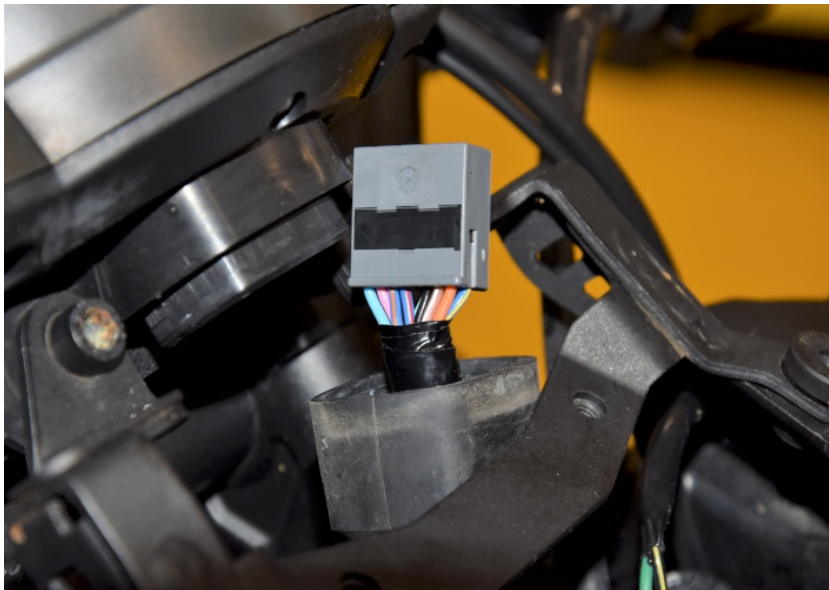

Cut the Pink wire about 4cm (1.5") away from the connector.


Connect the SpeedoHealer White wire to the Pink wire end, which is at the wiring harness side.

Connect the SpeedoHealer Green wire to the Pink wire end, which goes to the dashboard connector.

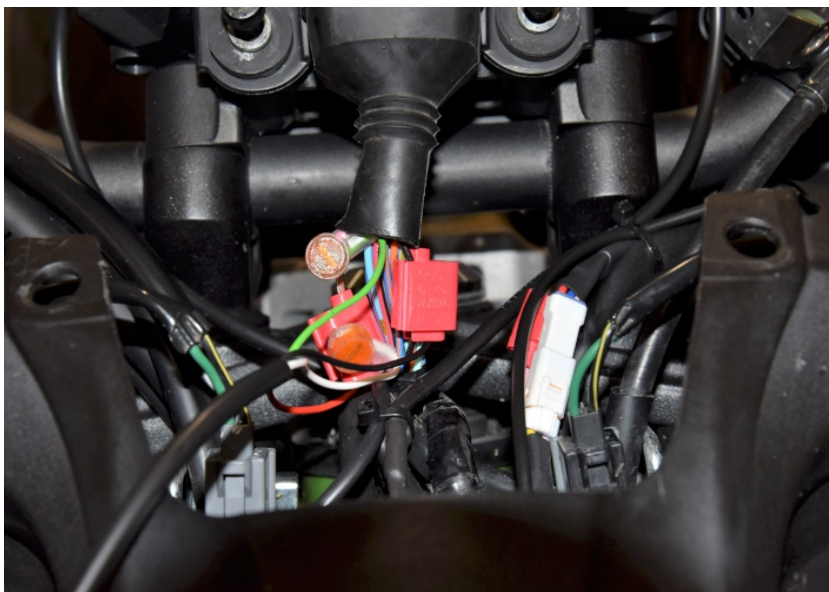

Splice the SpeedoHealer Red wire to the Brown/White wire.

Splice the SpeedoHealer Black wire to the Black wire.

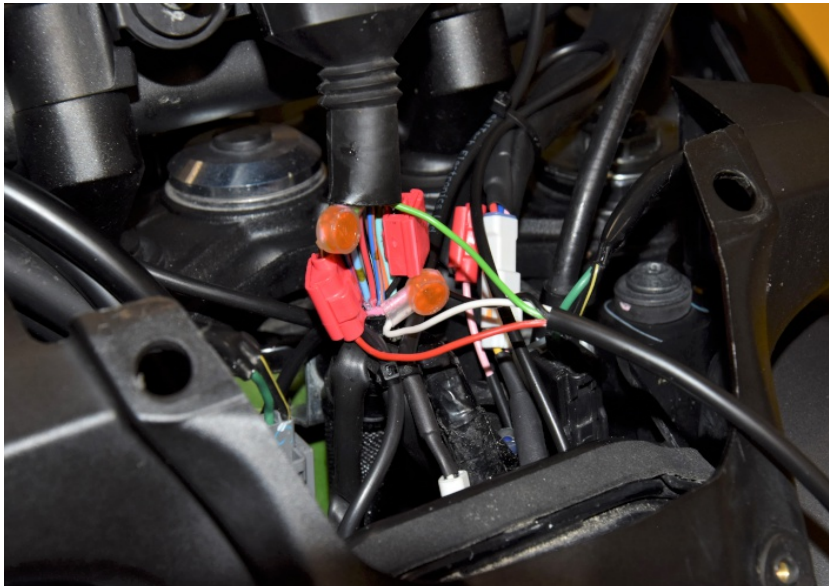

SpeedoHealer Supplementary Manual



Kawasaki Z900 2017- (SH-V4-C + SH-U01)

Typical position for the SpeedoHealer.

Secure the unit properly.

