

Yamaha FZ-8 ABS 2010-2015 (SH-V4 + SH-U01)

Secure the bike on a stand.



Remove the seats.

Remove the plastic cover from the fuel tank.

Remove the fuel tank and the airbox.



Locate the White/Yellow wire of the ECU connector below the airbox.



SpeedoHealer

Supplementary Manual



Yamaha FZ-8 ABS 2010-2015 (SH-V4 + SH-U01)


Cut the White/Yellow wire of the ECU connector.

Splice the Green SpeedoHealer wire to the White/Yellow wire end, which is at the ECU connector side.


Splice the White SpeedoHealer wire to the White/Yellow wire end, which is at the wiring harness side.



Splice the Red SpeedoHealer wire to the Orange wire of the ECU connector.

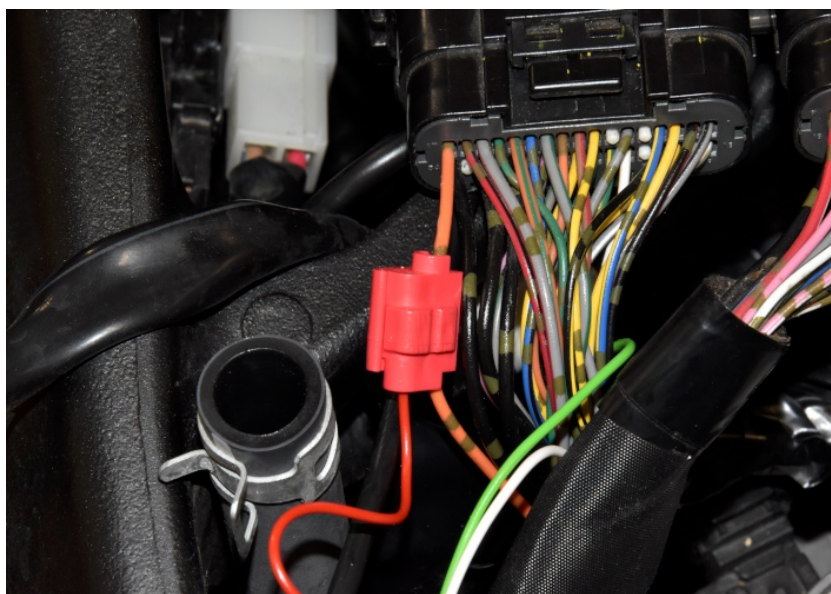


Splice the Black SpeedoHealer wire to the Black wire of the ECU connector

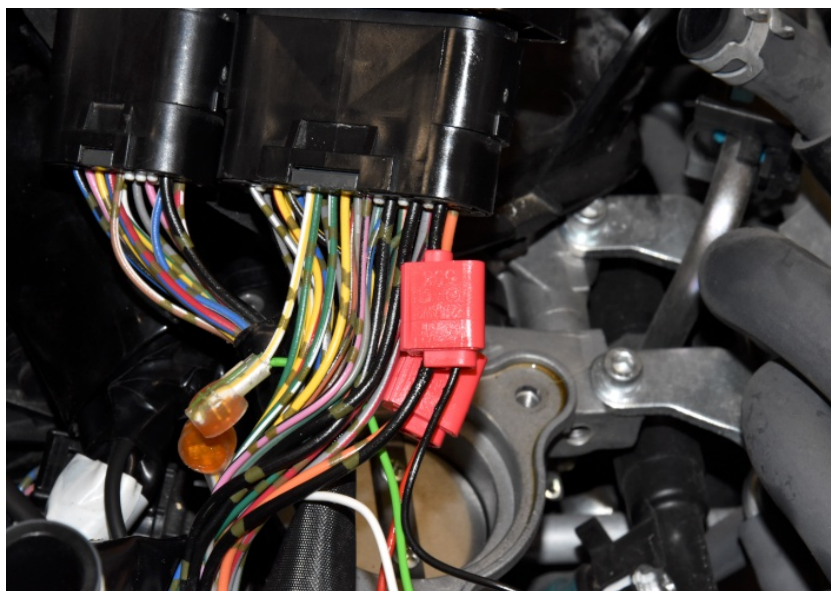

Yamaha FZ-8 ABS 2010-2015 (SH-V4 + SH-U01)

Typical position for the remote button.

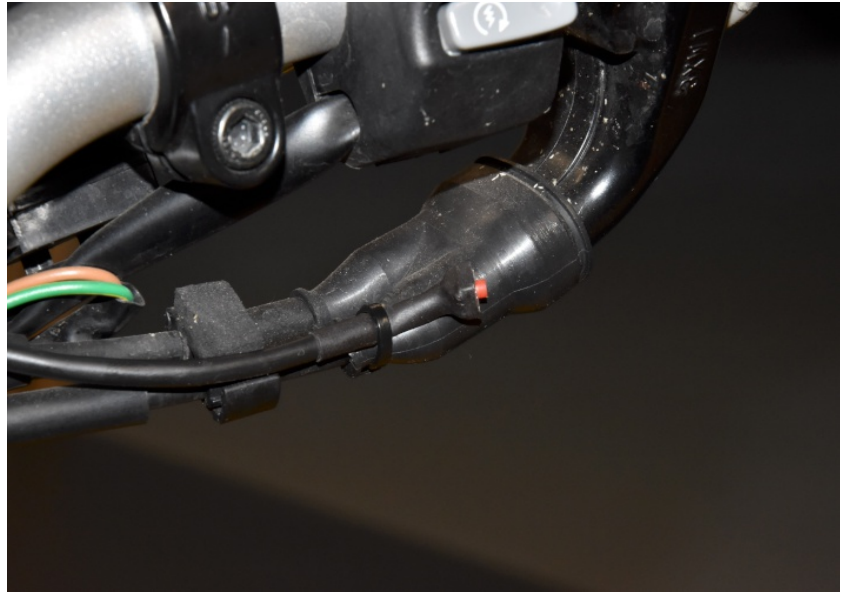

Typical position for the SpeedoHealer.

Secure the unit properly.

