

Yamaha MT-09 Tracer 2015-2020 (SH-V4-TSD + SH-U01)

Remove the seats.

Remove the fairings.




Remove the fuel tank.



Unplug the ABS ECU connector.

(Black connector behind ABS unit on right side)

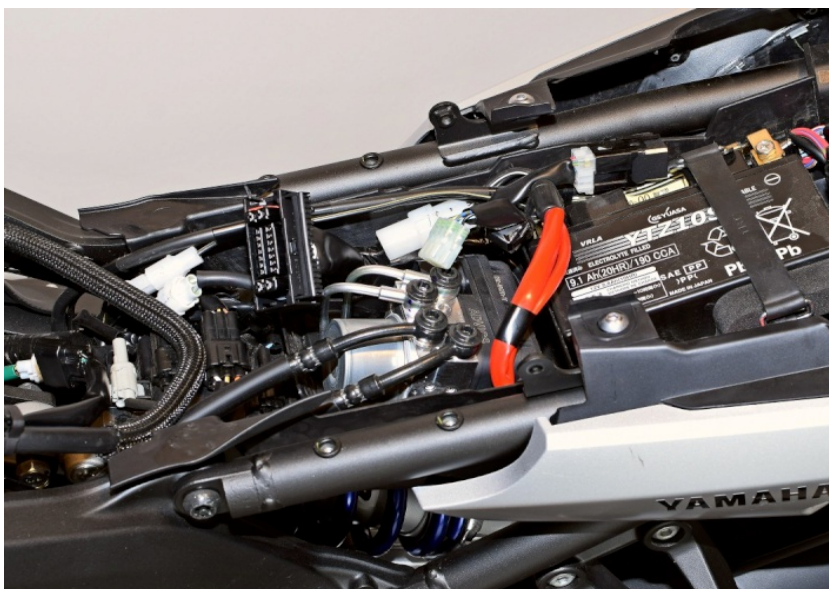


SpeedoHealer

Supplementary Manual



Yamaha MT-09 Tracer 2015-2020 (SH-V4-TSD + SH-U01)

Cut the White/Yellow wire about 4cm (1.5") away from the connector.

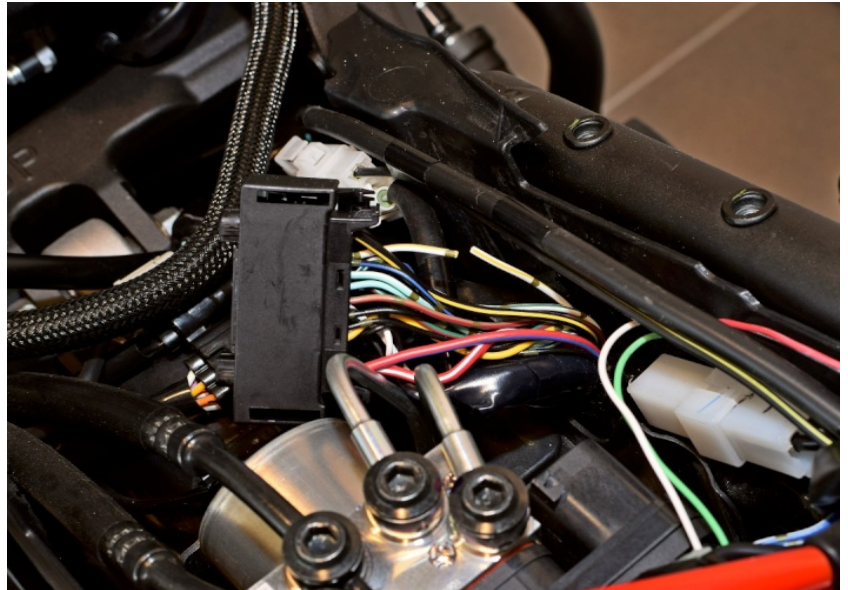


Splice the SpeedoHealer White wire to the White/Yellow wire end, which goes to the ABS ECU connector.

Splice the SpeedoHealer Green wire to the White/Yellow wire end, which is at the wiring harness side.



Splice the SpeedoHealer Red wire to the Red/White wire.

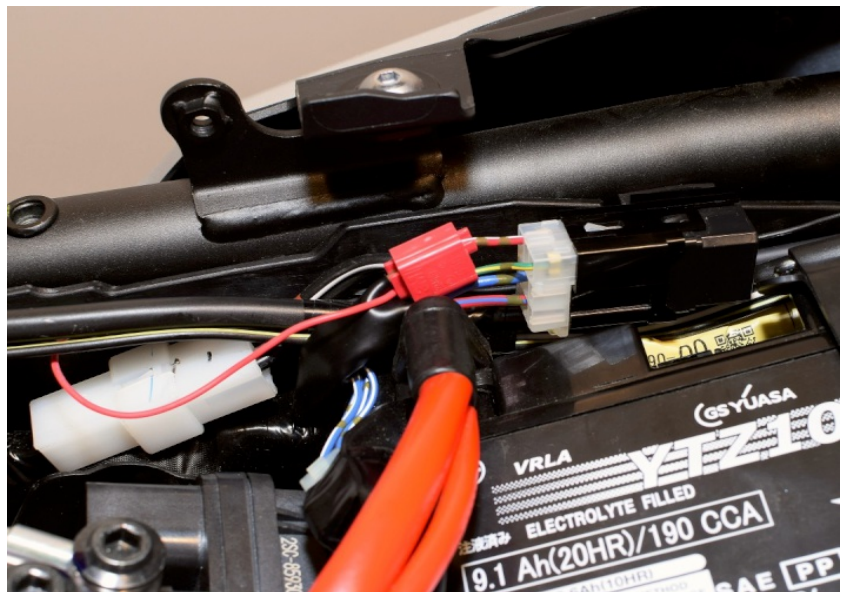


SpeedoHealer

Supplementary Manual



Yamaha MT-09 Tracer 2015-2020 (SH-V4-TSD + SH-U01)

Connect the SpeedoHealer Black wire to the chassis ground or to the battery negative terminal.

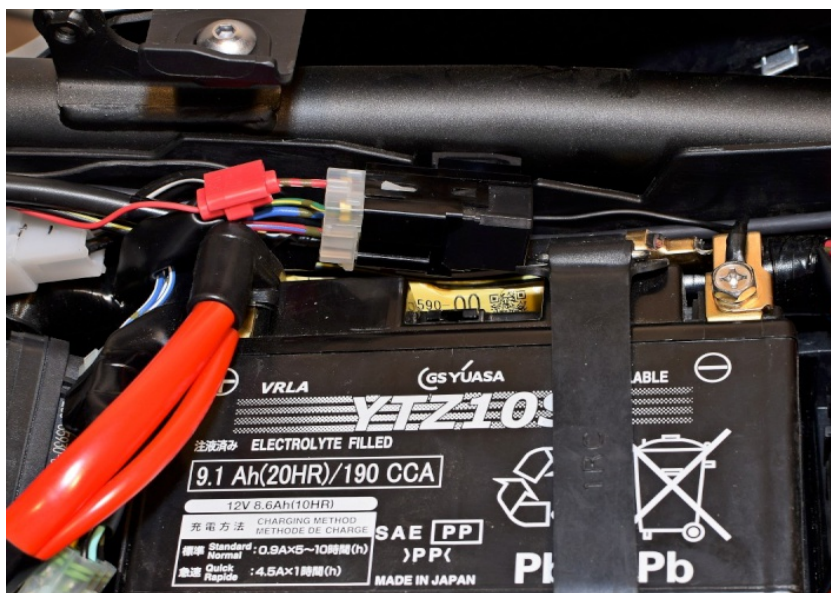

Recommended position for A-B switch.



Typical position for the SpeedoHealer.

Secure the unit properly.

