

# Yamaha MT-09 Tracer / FJ-09

2015-



## SUPPLEMENTARY MANUAL

for SH-U01


REMOVE THE SEATS.  
REMOVE THE FAIRINGS.



REMOVE THE FUEL TANK.



UNPLUG THE  
ABS ECU CONNECTOR.  
(BLACK CONNECTOR  
BEHIND ABS UNIT ON RIGHT SIDE)

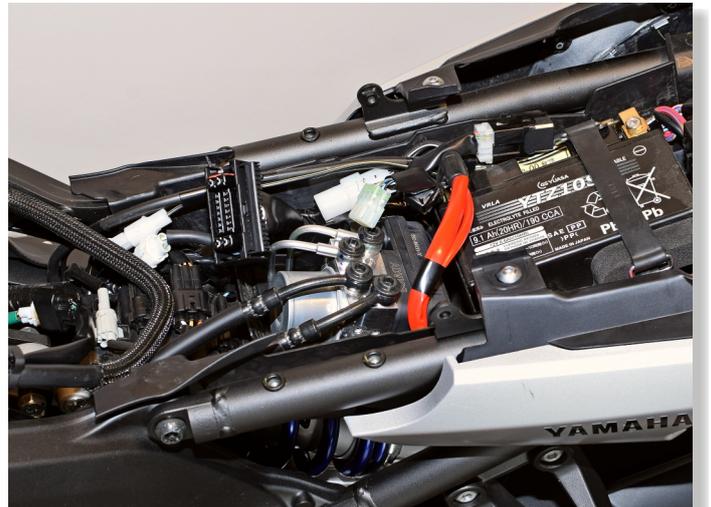


# Yamaha MT-09 Tracer / FJ-09

2015-




**CUT THE WHITE/YELLOW WIRE ABOUT  
4CM (1.5") AWAY FROM THE  
CONNECTOR.**

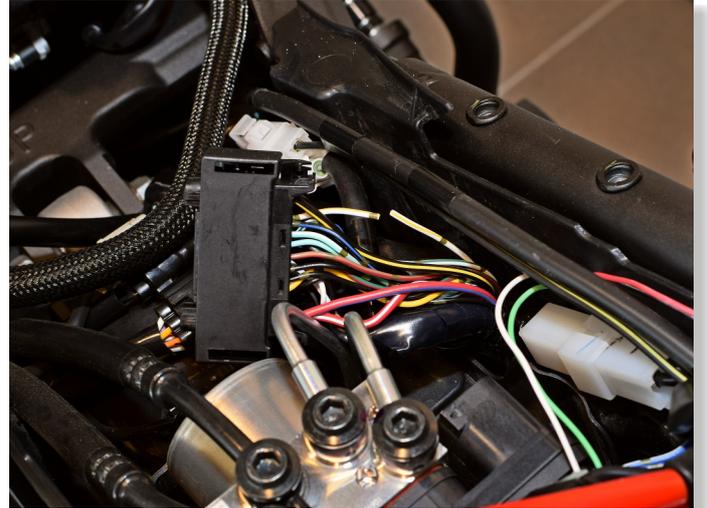

**SPLICE THE  
SPEEDOHEALER WHITE WIRE TO  
THE WHITE/YELLOW WIRE END,  
WHICH GOES TO THE  
ABS ECU CONNECTOR.**



**SPLICE THE  
SPEEDOHEALER GREEN WIRE TO  
THE WHITE/YELLOW WIRE END,  
WHICH IS AT THE  
WIRING HARNESS SIDE.**

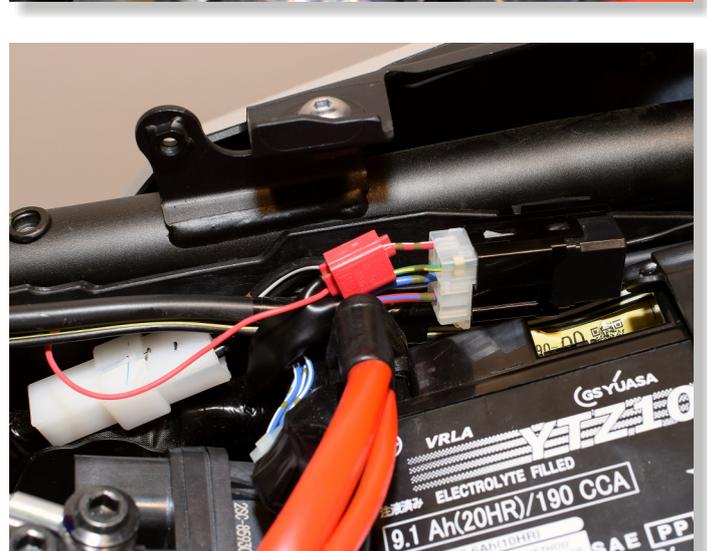


**SPLICE THE  
SPEEDOHEALER RED WIRE TO  
THE RED/WHITE WIRE.**

# Yamaha MT-09 Tracer / FJ-09


2015-



CONNECT THE  
SPEEDOHEALER BLACK WIRE TO  
CHASSIS GROUND OR TO THE  
BATTERY NEGATIVE TERMINAL.

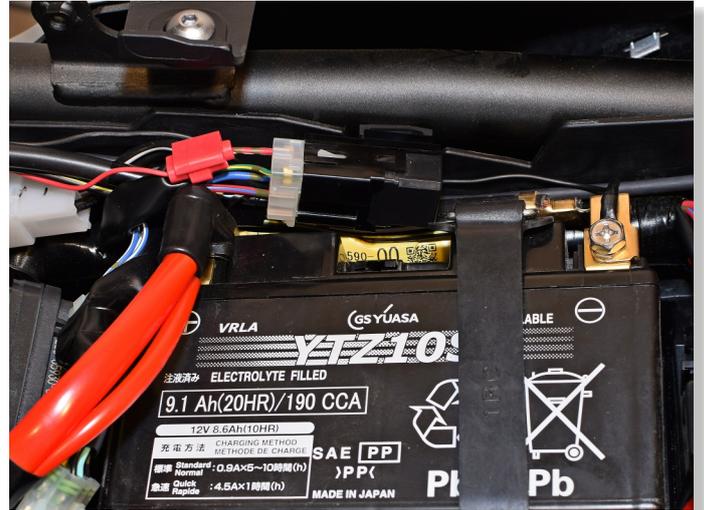

RECOMMENDED POSITION  
FOR A-B SWITCH.

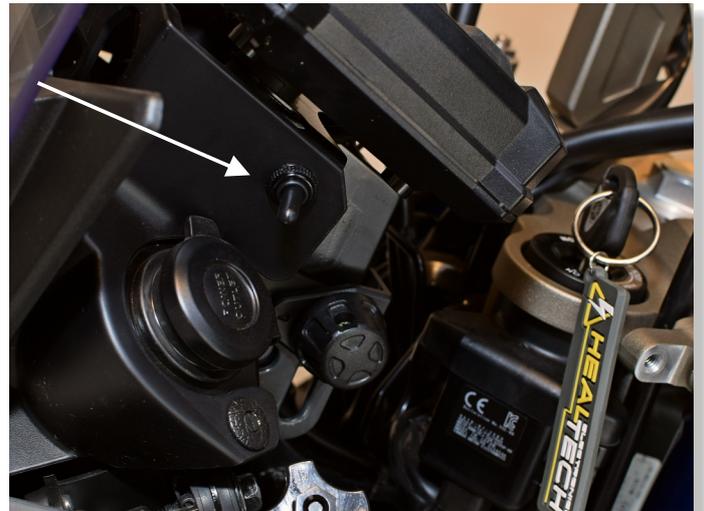

RECOMMENDED POSITION  
FOR SPEEDOHEALER.

