

## Yamaha XSR900 ABS TC 2016- (SH-V4-TSD + SH-U01)

Secure the bike on a stand.



Remove the seat.

Remove the covers from the fuel tank.

Remove the fuel tank.



Locate the ECU on the airbox.




## Yamaha XSR900 ABS TC 2016- (SH-V4-TSD + SH-U01)


Cut the White/Yellow wire.

Connect the SpeedoHealer White wire to the White/Yellow wire end, which is at the wiring harness side.


Connect the SpeedoHealer Green wire to the White/Yellow wire end, which goes to the ECU connector.

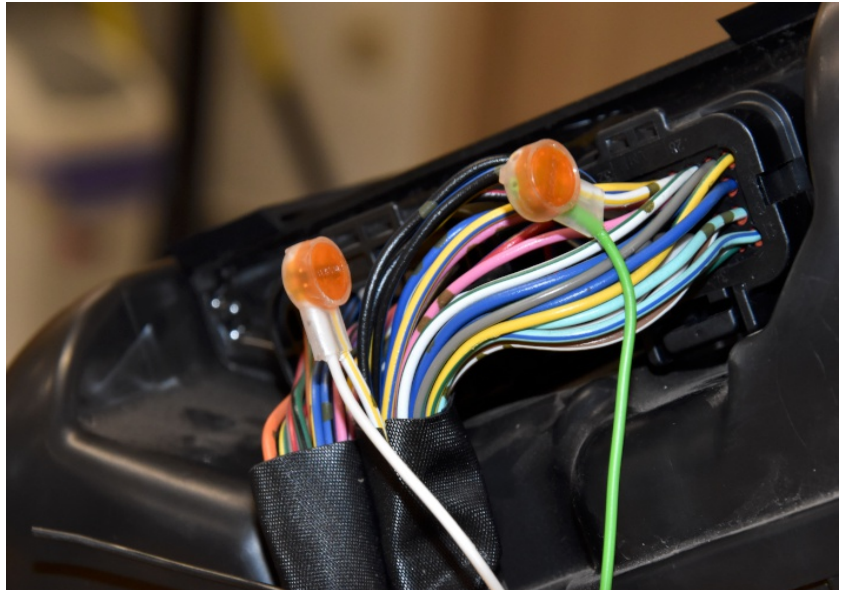

Splice the SpeedoHealer Black wire to the Black/Blue wire of the ECU connector.

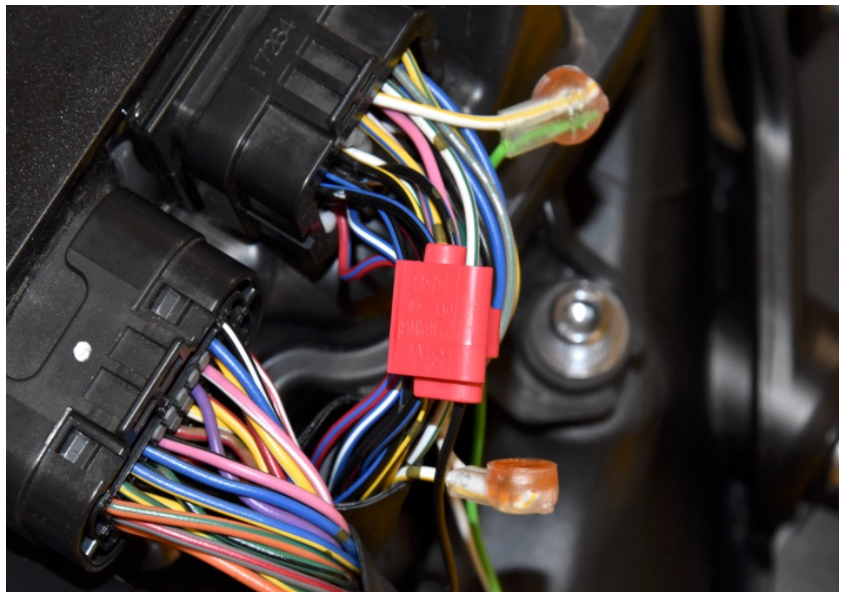

Splice the SpeedoHealer Red wire to the Red/Blue wire of the ECU connector.

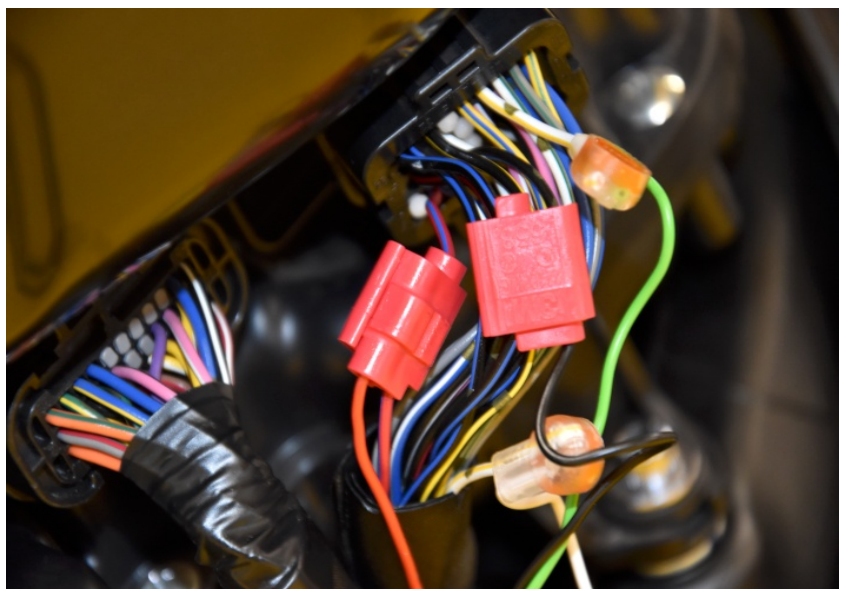



## Yamaha XSR900 ABS TC 2016- (SH-V4-TSD + SH-U01)

Typical position for the remote button.



Typical position for the SpeedoHealer.

Secure the unit properly.

