

SpeedoHealer

Supplementary Manual




Yamaha XT1200Z ABS TC Super Tenere 2010-2013 (SH-V4 + SH-U01)

Secure the bike on a stand.



Remove the main seat.

Remove the black plastic cover from the ABS ECU.

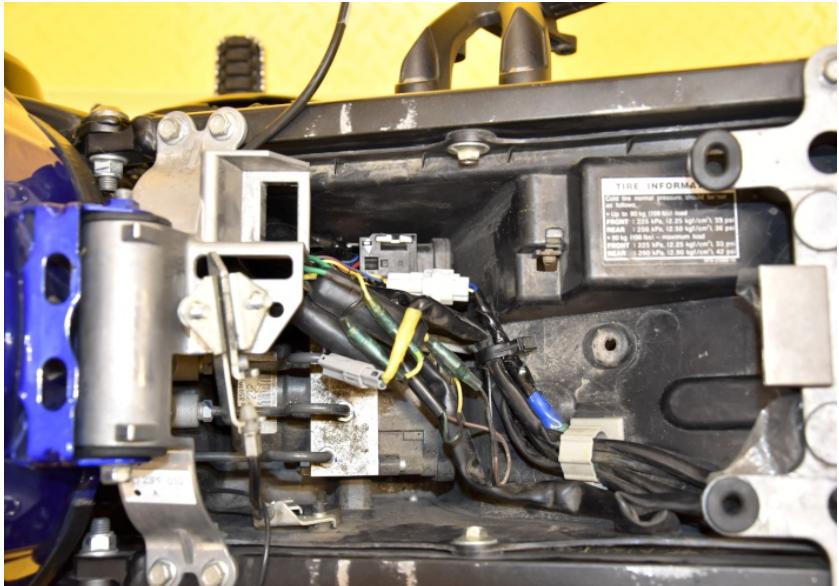

Locate the ABS connector.



SpeedoHealer


Supplementary Manual



Yamaha XT1200Z ABS TC Super Tenere 2010-2013 (SH-V4 + SH-U01)

Cut the Blue wire.

Connect the SpeedoHealer White wire to the Blue wire end, which goes to the ABS connector.

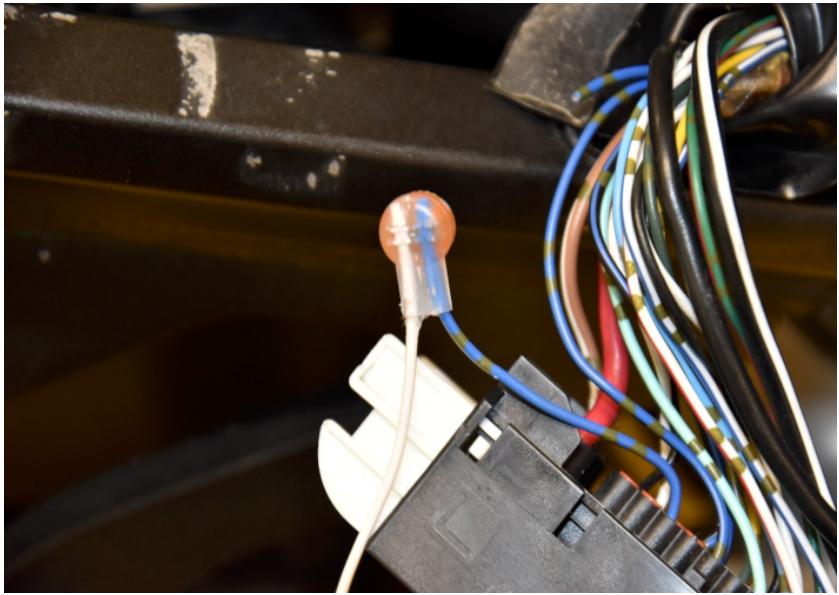


Connect the SpeedoHealer Green wire to the Blue wire end, which is at the wiring harness side.



Splice the SpeedoHealer Red wire to the Blue/Red wire of the rear light connector.

(White, 3-pole connector next to the ABS ECU)

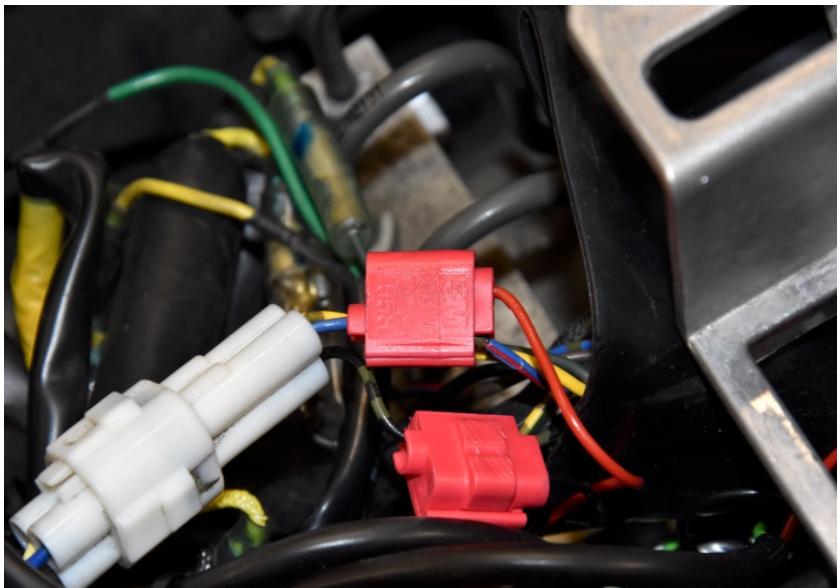

SpeedoHealer


Supplementary Manual



Yamaha XT1200Z ABS TC Super Tenere 2010-2013 (SH-V4 + SH-U01)

Splice the SpeedoHealer Black wire to the Black wire of the rear light connector.

(White, 3-pole connector next to the ABS ECU)

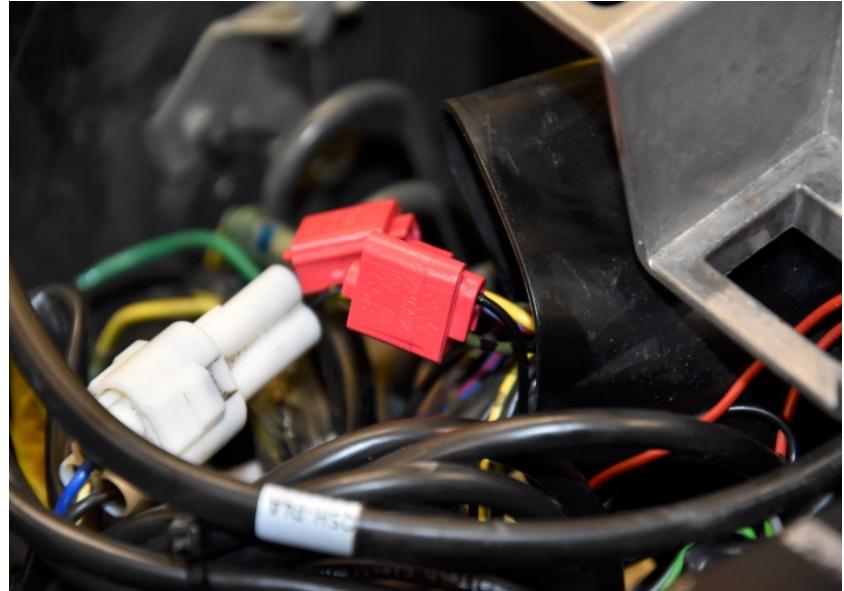

Typical position for the remote button.



Typical position for the SpeedoHealer.

Secure the unit properly.

