

### BMW F800 ABS GS 2013- (TB-U01)

Secure the bike on a stand.




Remove the seat.

Remove the middle tank cover and remove the left and right side covers.



Connect the TB terminals directly to the battery terminals.

Connect your accessories to the TB output terminal blocks.

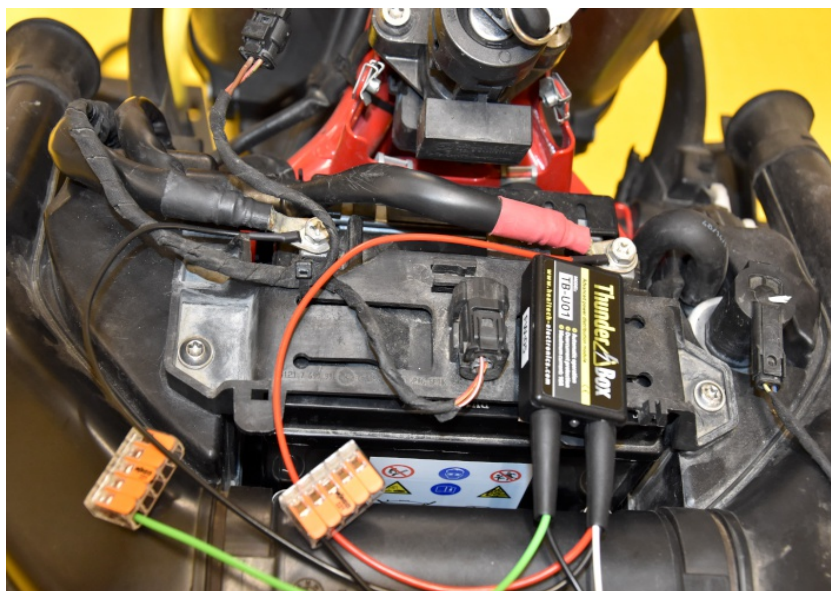

### BMW F800 ABS GS 2013- (TB-U01)

Optional:

If you wish to connect the White wire, splice it at the empty connector above the battery to the Red/White wire.



Typical position for the ThunderBox.

Secure the unit properly.

