

BMW R1200 ABS TC Euro 3 spec 2009-2014 (TB-U01)

Secure the bike on a stand.



Remove the seat.



Connect the TB terminals directly to the battery terminals.

Connect your accessories to the TB output terminal blocks.



ThunderBox


Supplementary Manual



BMW R1200 ABS TC Euro 3 spec 2009-2014 (TB-U01)

Optional:

If you wish to connect the White wire, splice it at the diagnostic connector to the Green/Blue wire.

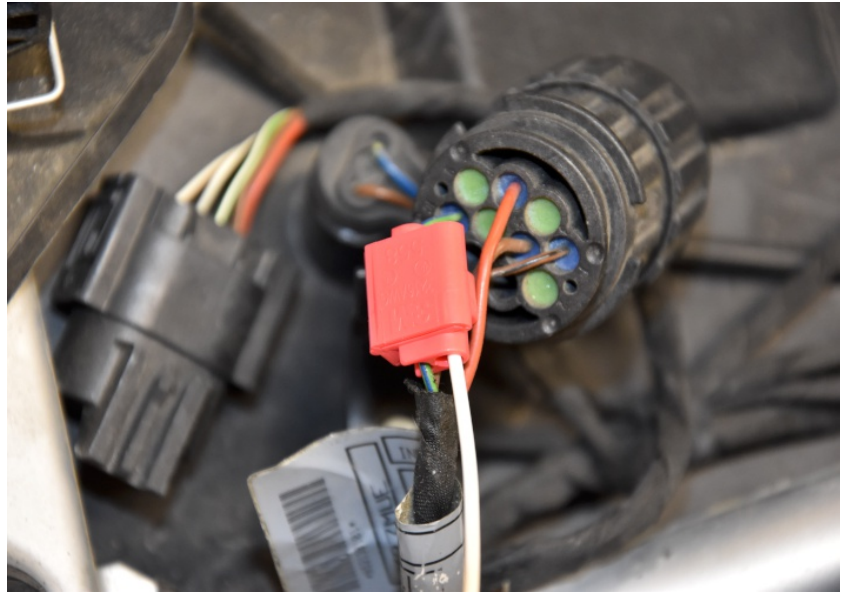

Typical position for the ThunderBox.

Secure the unit properly.

