


Honda CBF1000 F ABS 2010-2016 (TB-U01)

Secure the bike on a stand.

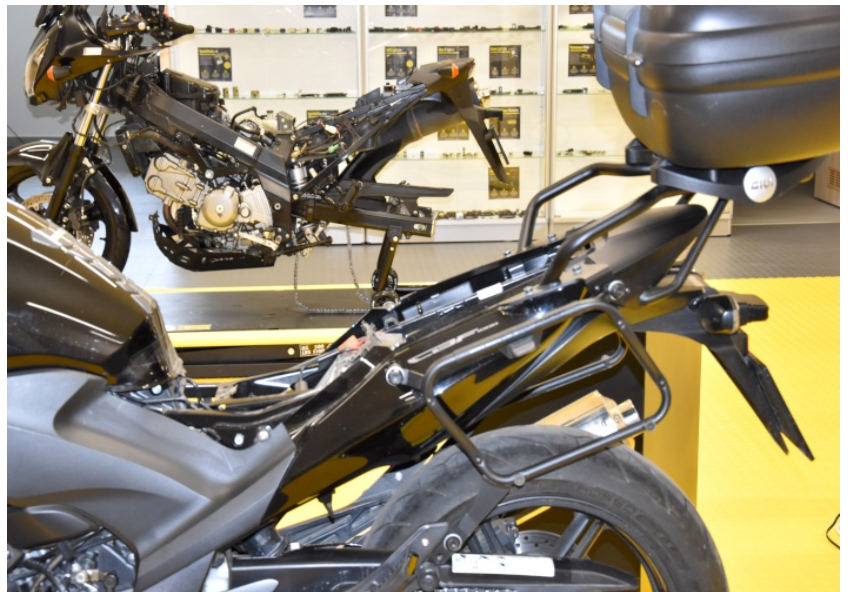


Remove the seats.



Connect the TB terminals directly to the battery terminals.

Connect your accessories to the TB output terminal blocks.

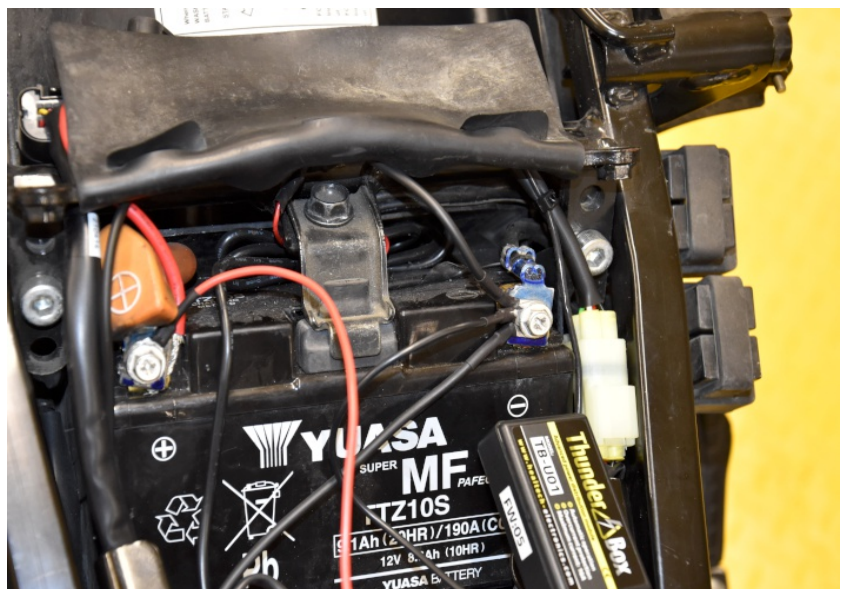

ThunderBox


Supplementary Manual



Honda CBF1000 F ABS 2010-2016 (TB-U01)

Optional:

If you wish to connect the White wire, splice it at the fuel pump connector to the Brown wire.

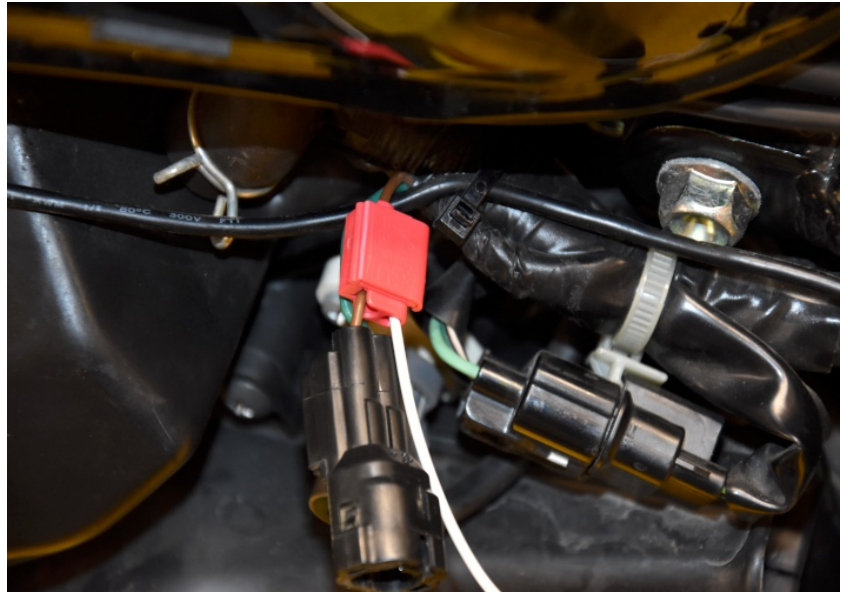

Typical position for the ThunderBox.

Secure the unit properly.

