

Honda VFR1200X Crosstourer 2012- (TB-U01)

Secure the bike on a stand.




Remove the seat.



Connect the TB terminals directly to the battery terminals.


Connect your accessories to the TB output terminal blocks.

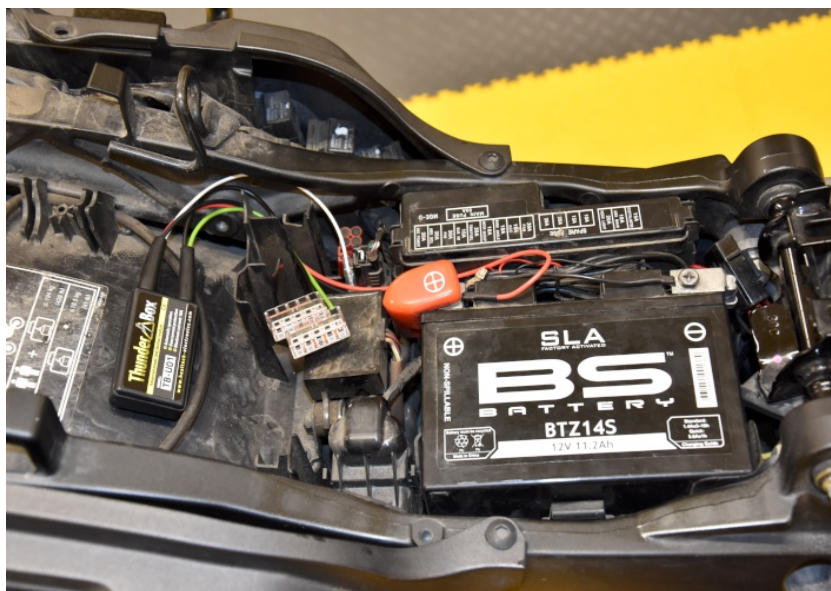

Honda VFR1200X Crosstourer 2012- (TB-U01)

Optional:

If you wish to connect the White wire, splice it at the fuel pump connector to the Yellow/Red wire.

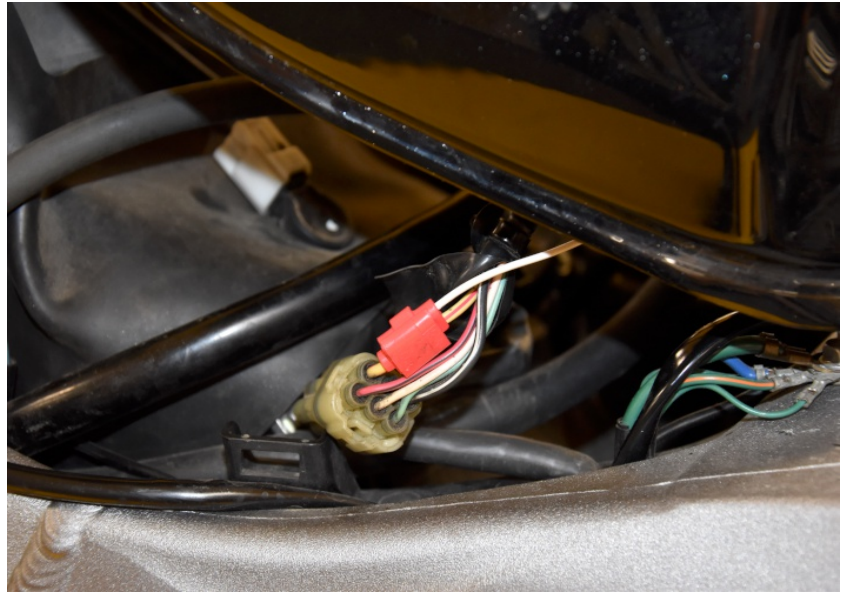

Typical position for the ThunderBox.

Secure the unit properly.

