

Kove 800X ABS Rally 2025- (TB-U01)

Secure the bike on a stand.




Remove the seat and the side fairing on the left side.



Connect the TB terminals directly to the battery terminals.


Connect your accessories to the TB output terminal blocks.

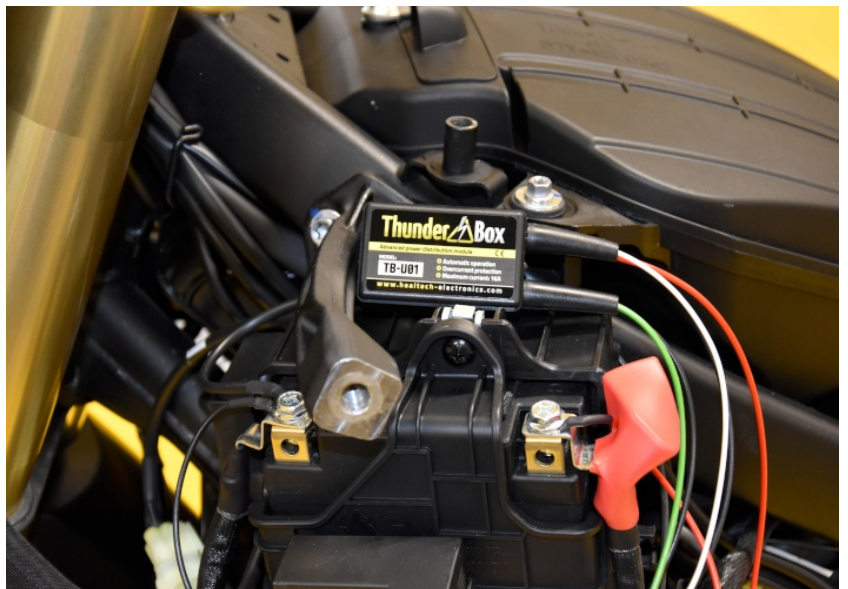

Kove 800X ABS Rally 2025- (TB-U01)

Optional:

If you wish to connect the White wire, splice it at the PAIR connector to the Purple wire.

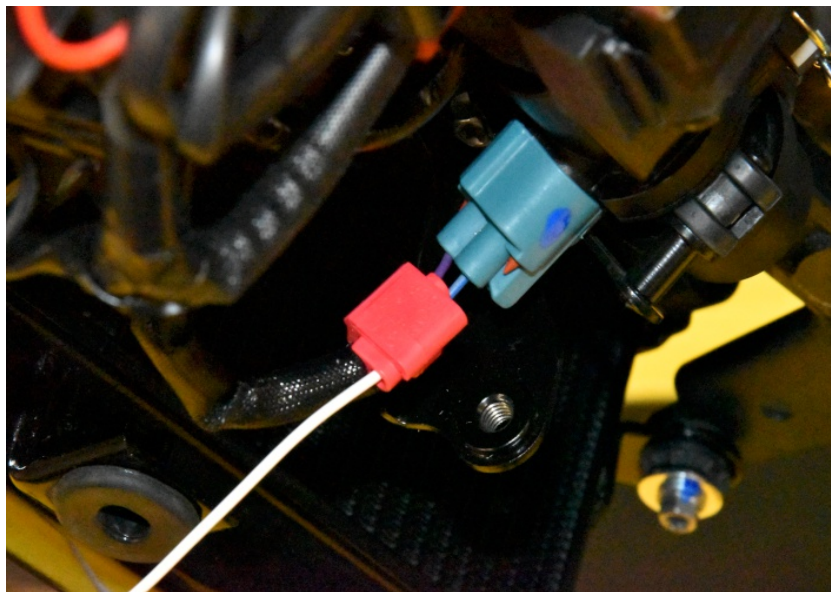

Typical position for the ThunderBox.

Secure the unit properly.

