

# ThunderBox

## Supplementary Manual



### Moto Morini X-Cape 650 ABS 2021- (TB-U01)

Secure the bike on a stand.



Remove the seats.



Connect the TB terminals directly to the battery terminals.

Connect your accessories to the TB output terminal blocks.



# ThunderBox

## Supplementary Manual




### Moto Morini X-Cape 650 ABS 2021- (TB-U01)

Optional:

If you wish to connect the White wire, splice it at the rear brake light connector to the Black/Yellow wire.

*(White, 2-pole connector)*

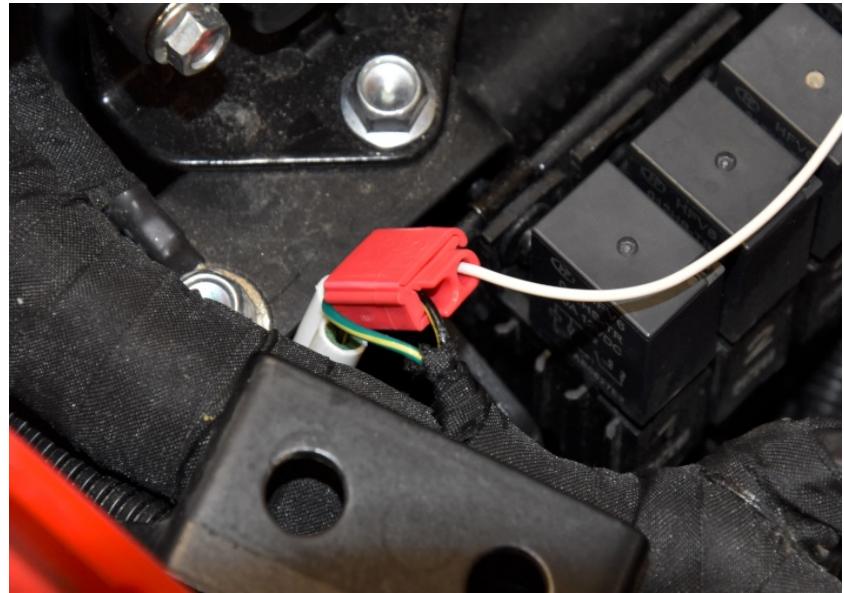

Typical position for the ThunderBox.

Secure the unit properly.

