

Polaris Sportsman 570 2014- (TB-U01)

Select the transmission to Parking position and secure the vehicle with the lockable hand lever.




Open the front storage.



Connect the TB terminals directly to the battery terminals.


Connect your accessories to the TB output terminal blocks.

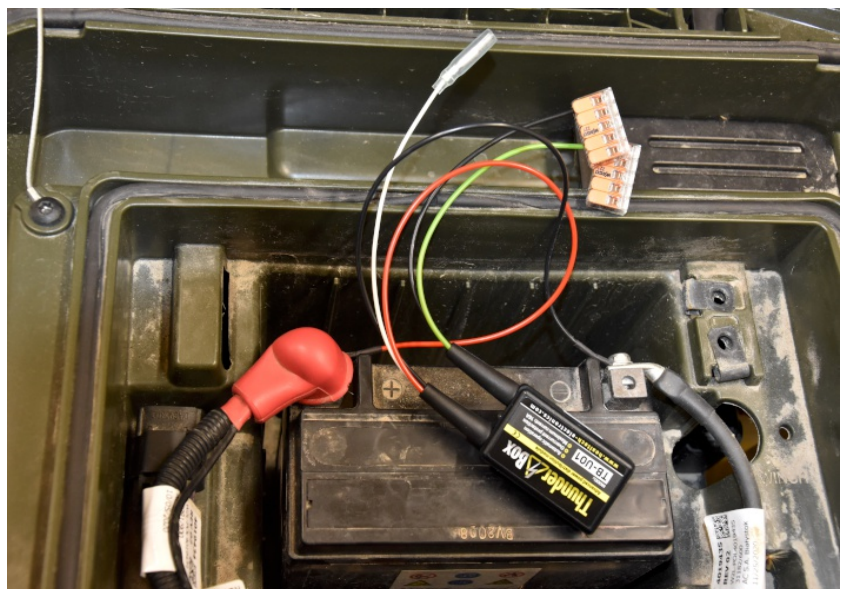

Polaris Sportsman 570 2014- (TB-U01)

Optional:

If you wish to connect the White wire, splice it at the diagnostic system connector to the Orange wire.

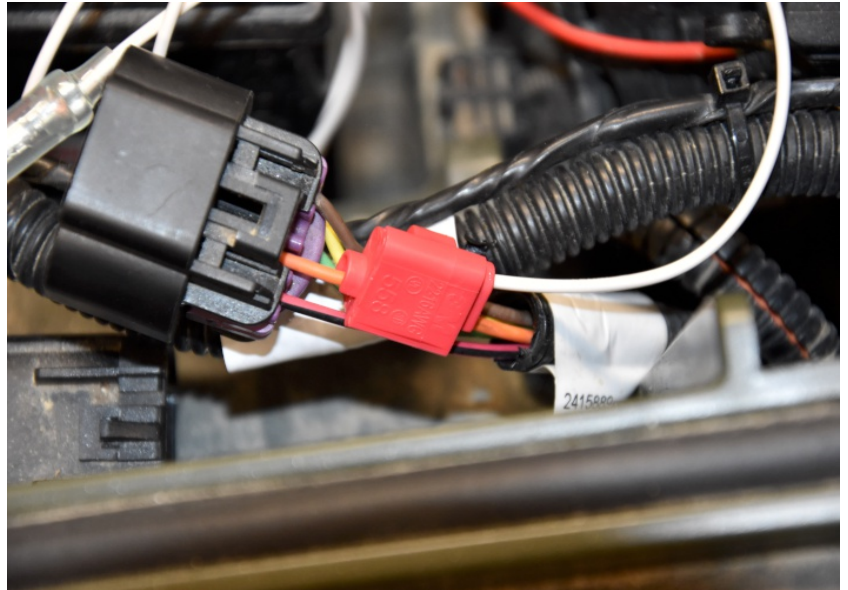

Typical position for the ThunderBox.

Secure the unit properly.

