

ThunderBox

Supplementary Manual



Royal Enfield Meteor 350 ABS 2021- (TB-U01)

Secure the bike on a stand.



Remove the seats and the side cover on the right side.



Connect the TB terminals directly to the battery terminals.

Connect your accessories to the TB output terminal blocks.



ThunderBox


Supplementary Manual



Royal Enfield Meteor 350 ABS 2021- (TB-U01)

Optional:

If you wish to connect the White wire, splice it at the rear light connector to the White wire.

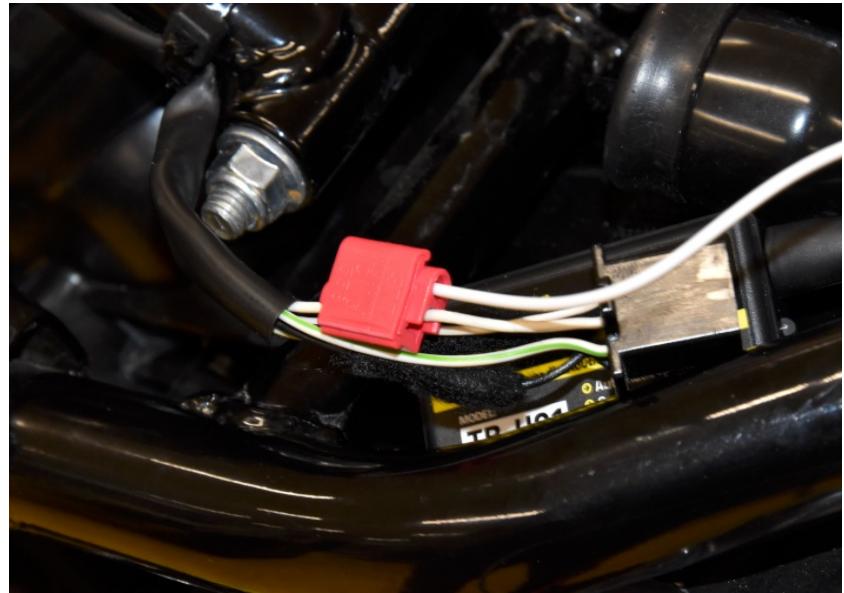

Typical position for the ThunderBox.

Secure the unit properly.

