

Triumph Street Triple 2007-2011 (TB-U01)

Secure the bike on a stand.



Remove the seat.



Connect the TB terminals directly to the battery terminals.


Connect your accessories to the TB output terminal blocks.



Triumph Street Triple 2007-2011 (TB-U01)

Optional:

If you wish to connect the White wire, splice it at the rear light connector to the Yellow wire.

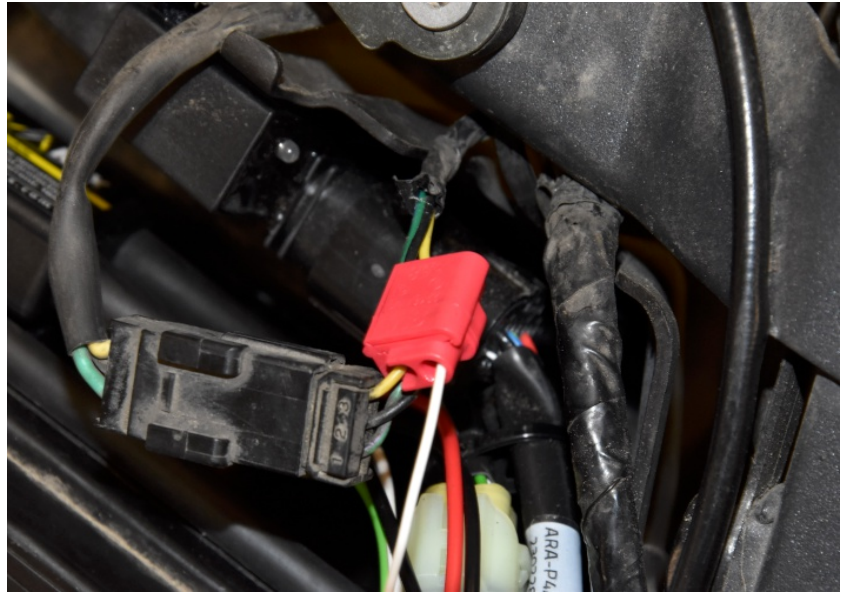

Typical position for the ThunderBox.

Secure the unit properly.

