

Honda CB500X ABS 2013- (TB-U02)

Secure the bike on a stand.




Remove the seat.



Connect the TB terminals directly to the battery terminals.

Connect your accessories to the TB output terminal blocks.

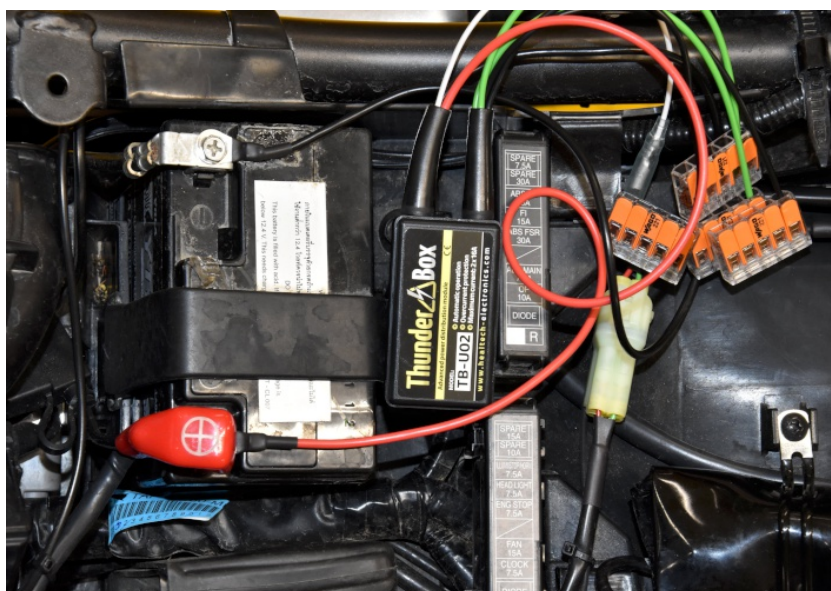

Honda CB500X ABS 2013- (TB-U02)

Optional:

If you wish to connect the White wire, splice it at the fuel pump connector to the Brown wire.



Typical position for the ThunderBox.

Secure the unit properly.

