

Honda VFR800X ABS TC 2011- (TB-U02)

Secure the bike on a stand.




Remove the seats and the plastic cover from the battery.



Connect the TB terminals directly to the battery terminals.

Connect your accessories to the TB output terminal blocks.

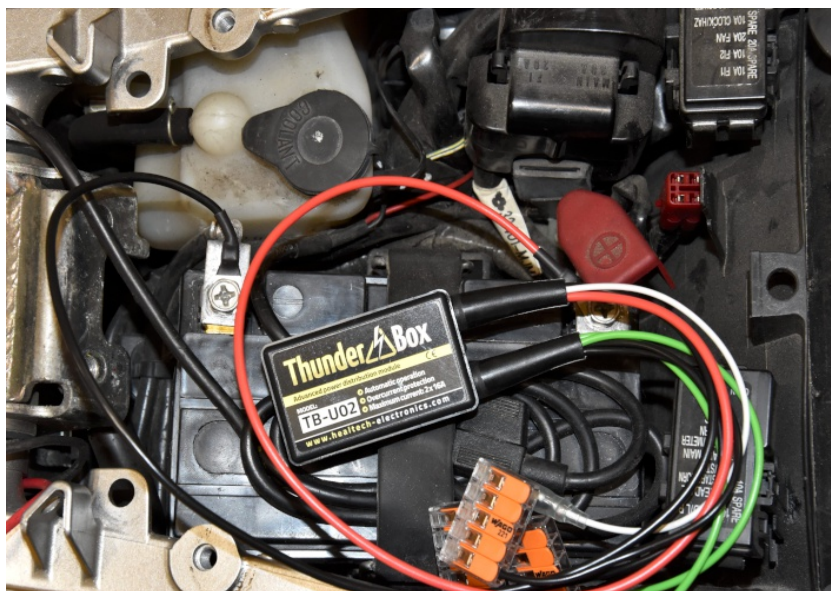

Honda VFR800X ABS TC 2011- (TB-U02)

Optional:

If you wish to connect the White wire, splice it at the fuel pump connector to the Yellow/Red wire.



Typical position for the ThunderBox.

Secure the unit properly.

