


Moto Guzzi V7 III ABS TC 2019- (TB-U02)

Secure the bike on a stand.




Remove the seat and the side cover on the right side.

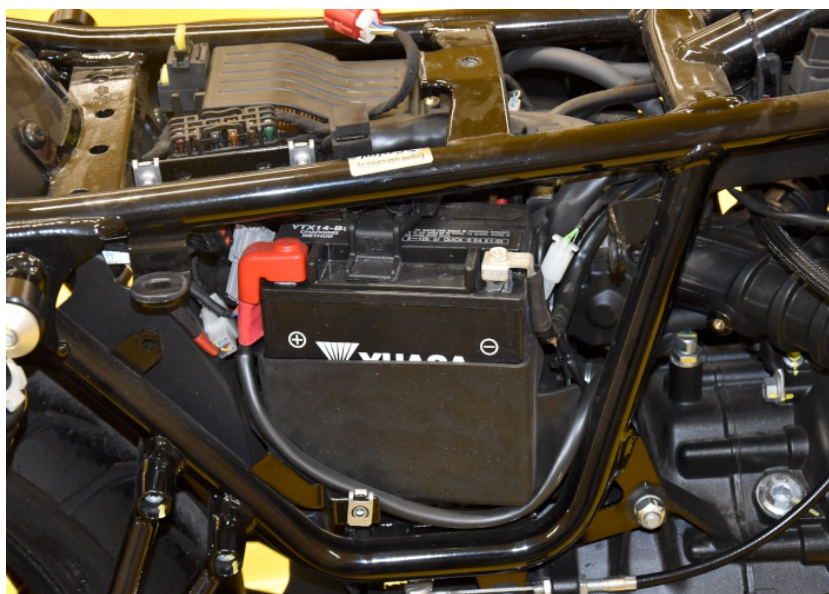

Connect the TB terminals directly to the battery terminals.


Connect your accessories to the TB output terminal blocks.

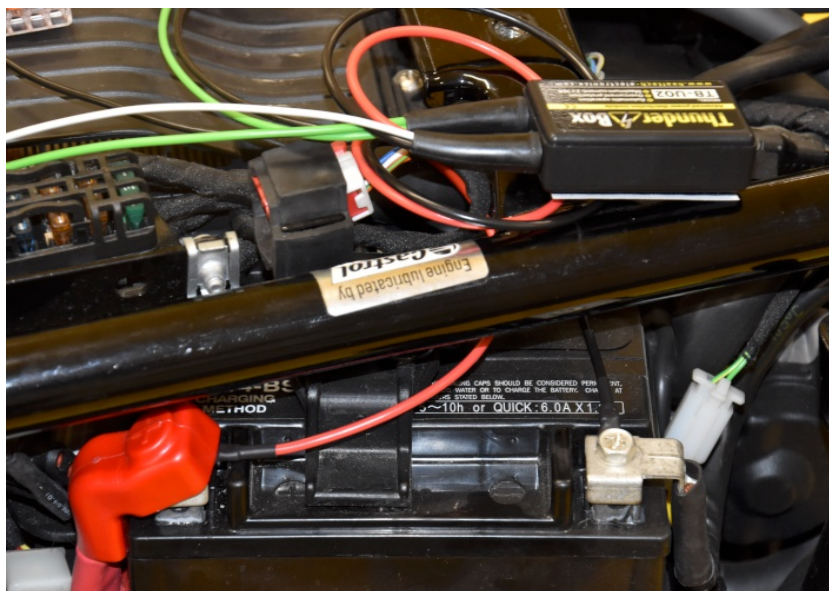

Moto Guzzi V7 III ABS TC 2019- (TB-U02)

Optional:

If you wish to connect the White wire, splice it at the rear light connector to the Yellow wire.

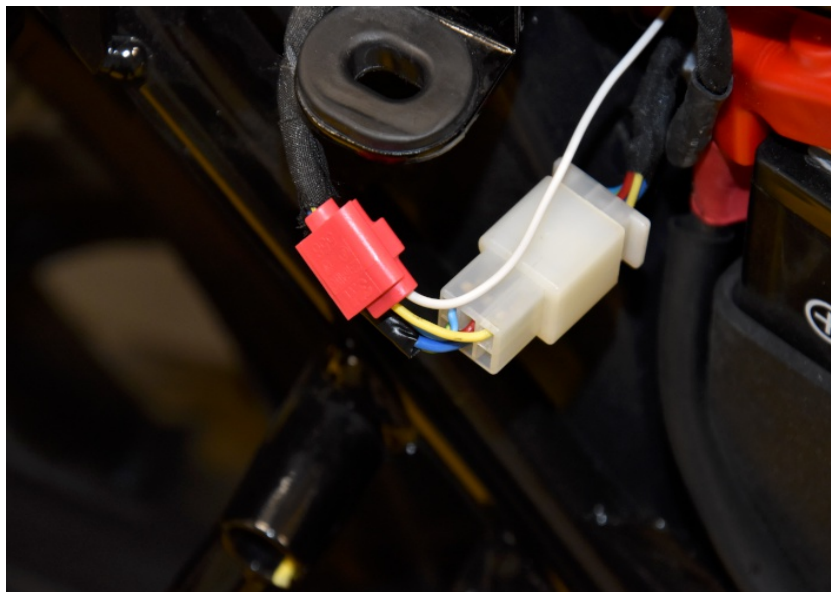

Typical position for the ThunderBox.

Secure the unit properly.

