

GIPRO X-TYPE GEAR INDICATOR

Supplementary Manual



Aprilia Tuono 2002-2005 (GPXT + GPX-U01)

Remove the main seat.

Remove the frame cover under the seat on the right side.

Lift up or remove the fuel tank.




Locate the speed sensor connector on the right side under the frame cover.



Connect the GPX Red wire to the Green wire of the speed sensor connector.

(Transparent, 3-pole connector)

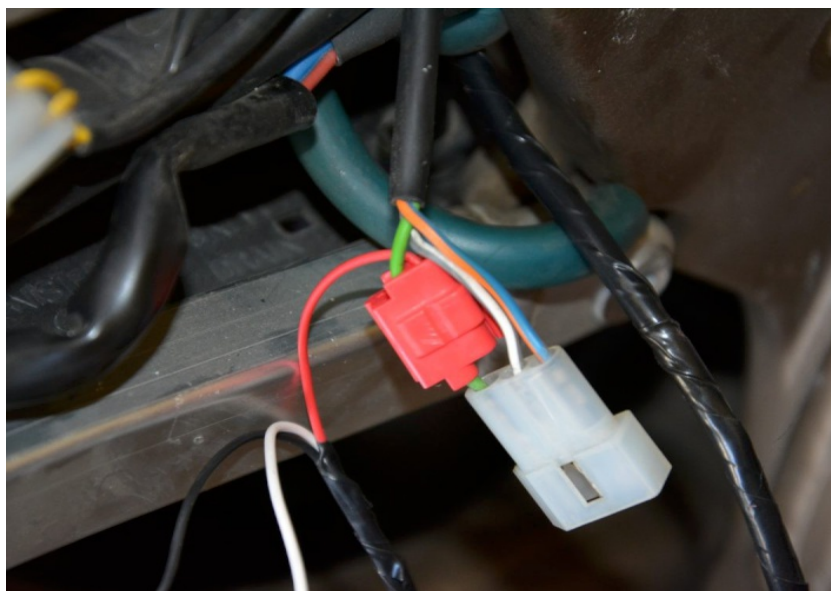

GIPRO X-TYPE GEAR INDICATOR


Supplementary Manual



Aprilia Tuono 2002-2005 (GPXT + GPX-U01)


Connect the GPX White wire to the Gray/White wire of the speed sensor connector.

(Transparent, 3-pole connector)

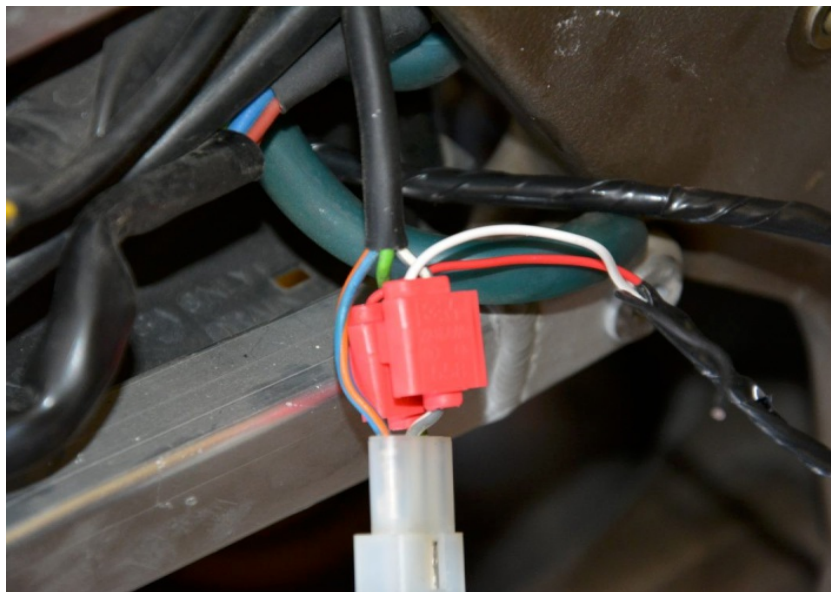


Connect the GPX Black wire to the Blue/Orange wire of the speed sensor connector.

(Transparent, 3-pole connector)

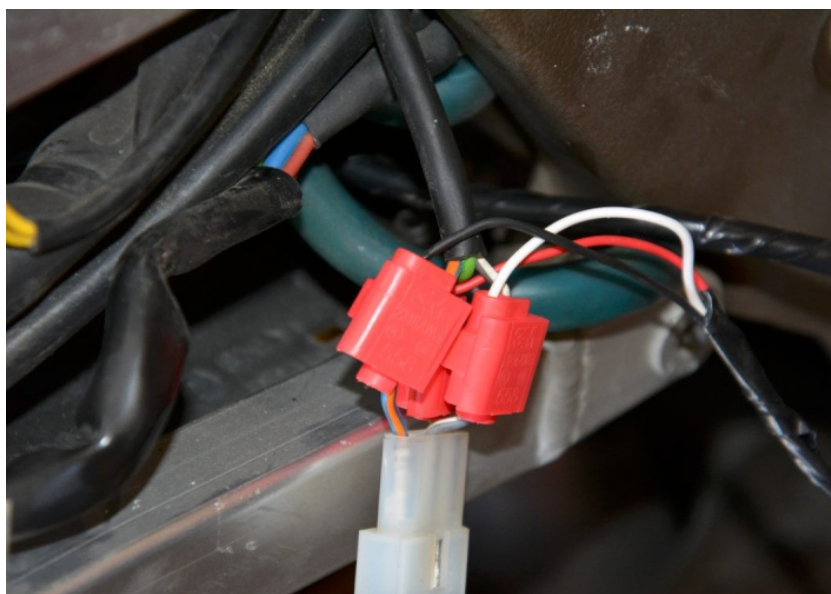

Connect the GPX Green wire to the Orange/White wire of the ignition coil under the middle fairing on the right side.

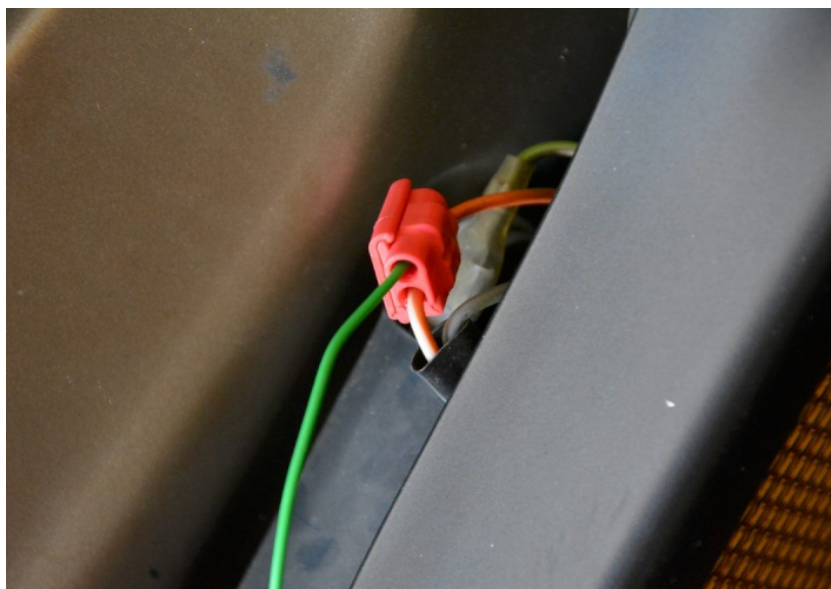

GIPRO X-TYPE GEAR INDICATOR

Supplementary Manual



Aprilia Tuono 2002-2005 (GPXT + GPX-U01)

Typical position for the gear indicator.

Secure the unit properly.

