

GIPRO X-TYPE GEAR INDICATOR Supplementary Manual



Aprilia Tuono 2006-2010 (GPXT + GPX-U01)

Remove the main seat.

Lift up or remove the fuel tank.


Locate the speed sensor connector.

Route the GPX cable through the top opening of the dust boot.




Connect the GPX Red wire to the Red wire of the speed sensor connector.

(Transparent, 3-pole connector in dust boot behind the water reservoir tank)

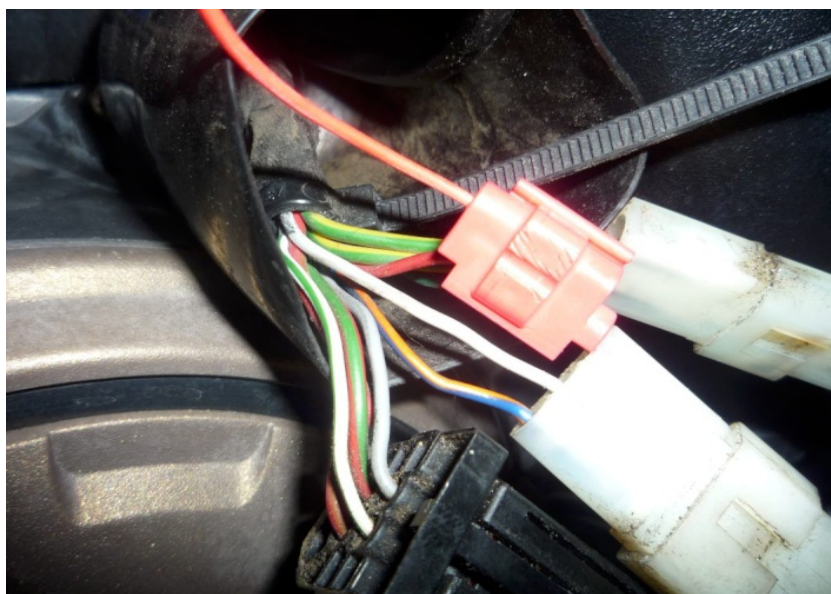

Connect the GPX White wire to the Gray/White wire of the speed sensor connector.

(Transparent, 3-pole connector in dust boot behind the water reservoir tank)

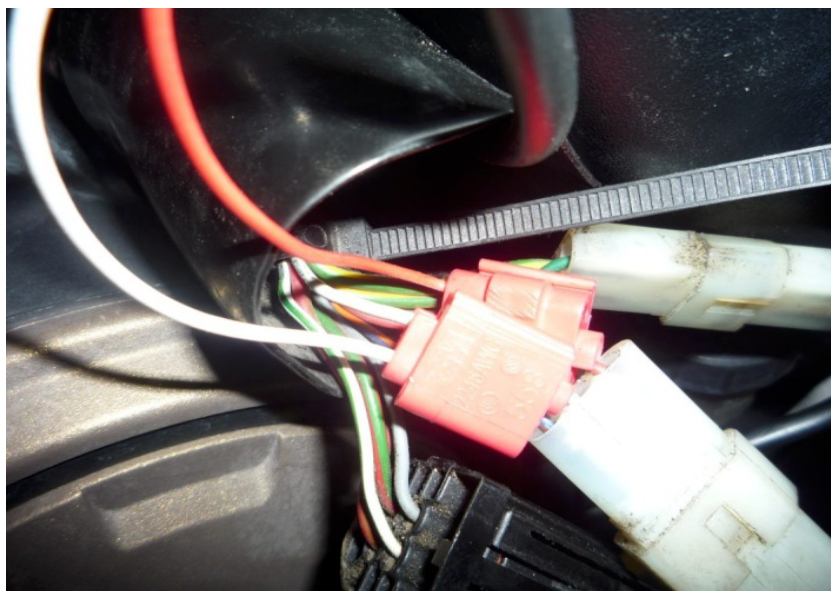

GIPRO X-TYPE GEAR INDICATOR


Supplementary Manual



Aprilia Tuono 2006-2010 (GPXT + GPX-U01)


Connect the GPX Black wire to the Blue/Orange wire of the speed sensor connector.

(Transparent, 3-pole connector in dust boot behind the water reservoir tank)

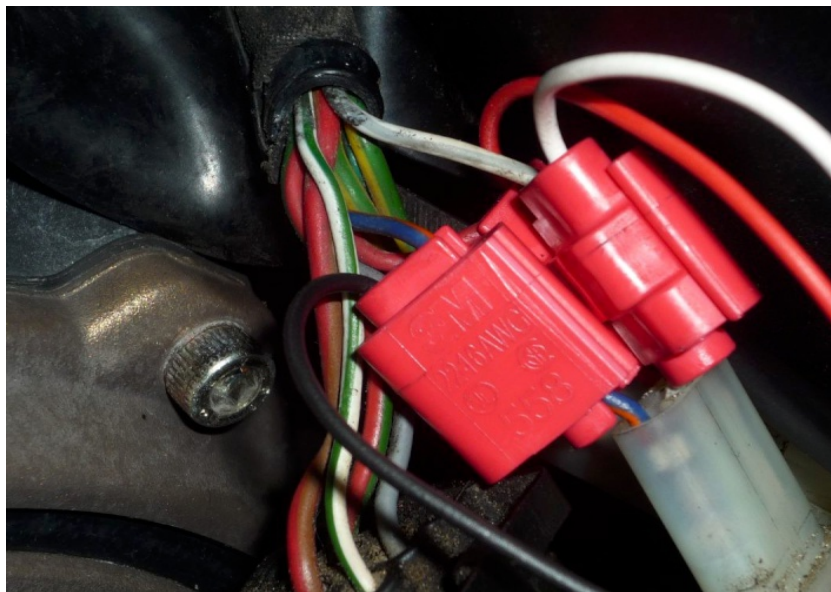

Connect the GPX Green wire to the Blue/Yellow wire of the Camshaft Position Sensor connector.

(Black, 3-pole connector on the cylinder head at the left)

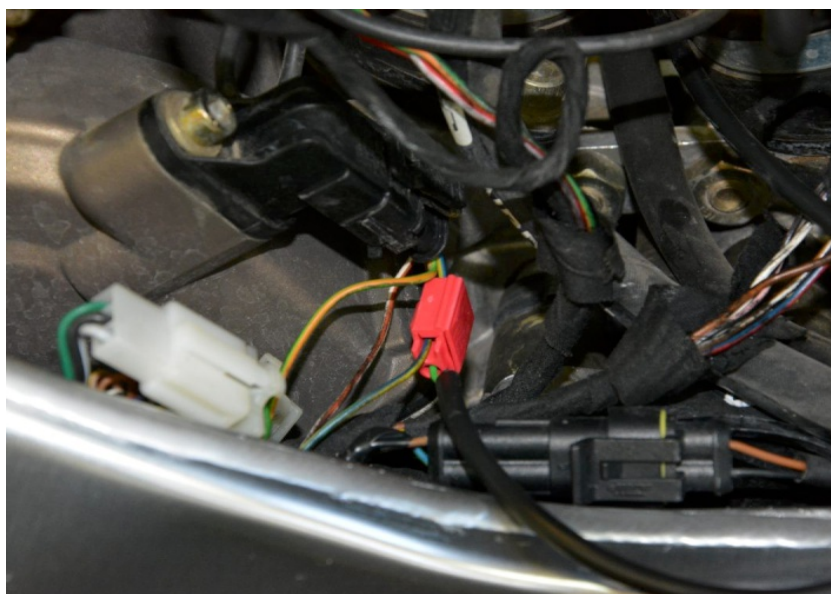

Typical position for the gear indicator.

Secure the unit properly.

