

GIPRO X-TYPE GEAR INDICATOR

Supplementary Manual



Kawasaki ZZR1100 1993-2001 (GPXT + GPX-WSS)

Secure the bike on a stand.



Remove the seat.

Remove the fuel tank cover and remove the fuel tank.

Remove the airbox.



Mount the wheel speed sensor at the rear wheel.

(Any rotating metal targets will work, but the targets must be spaced at equal distances. Adjust and tighten the sensor so that the tip of the sensor will be in-line with the center of the target. The air-gap should be about 1mm.)



GIPRO X-TYPE GEAR INDICATOR


Supplementary Manual



Kawasaki ZZR1100 1993-2001 (GPXT + GPX-WSS)


Connect the GPX Black/Green wire to the Yellow wire of the crankshaft position sensor connector.

(Transparent, 2-pole connector below the fuel tank.)

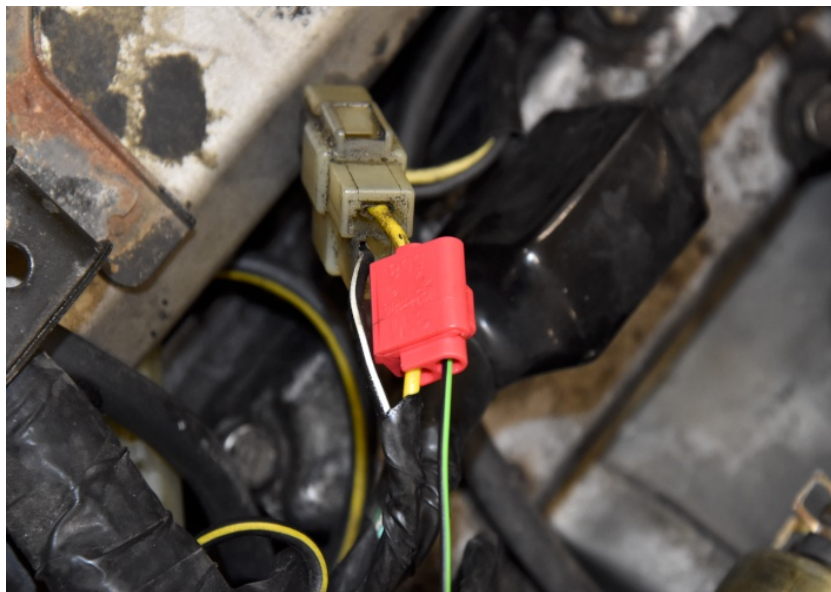

Connect the GPX Red wire to the Brown wire of the black multi connector under the fuel tank.

Connect the GPX Black wire to the Black/Yellow wire of the black multi connector under the fuel tank.

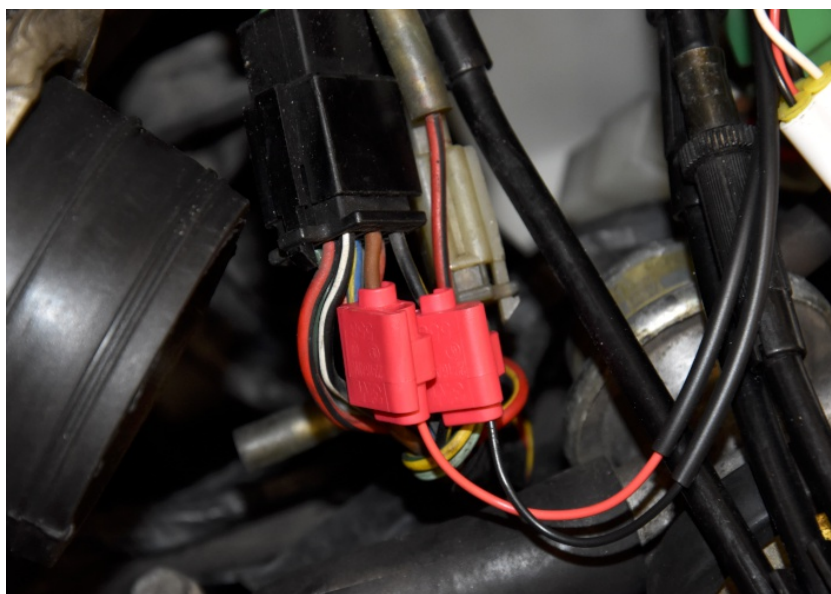

Connect the 3-pole wheel speed sensor connector to the GPX wiring harness connector.

Typical position for the gear indicator.

Secure the unit properly.

