

GIPRO X-TYPE GEAR INDICATOR

Supplementary Manual



Yamaha YZF-R1 2004-2006 (GPXT + GPX-Y01)

Remove the main seat.



Remove the black tank covers.

Lift up or remove the fuel tank.



Plug the GPX connectors in-line with the speed sensor connectors.

(White, 3-pole triangular connectors at the right side, below the fuel tank.)



GIPRO X-TYPE GEAR INDICATOR


Supplementary Manual



Yamaha YZF-R1 2004-2006 (GPXT + GPX-Y01)


Connect the GPX Black/Green wire to the Gray wire of the crankshaft position sensor connector.

(Transparent, 2-pole connector at the right side, below the fuel tank.)

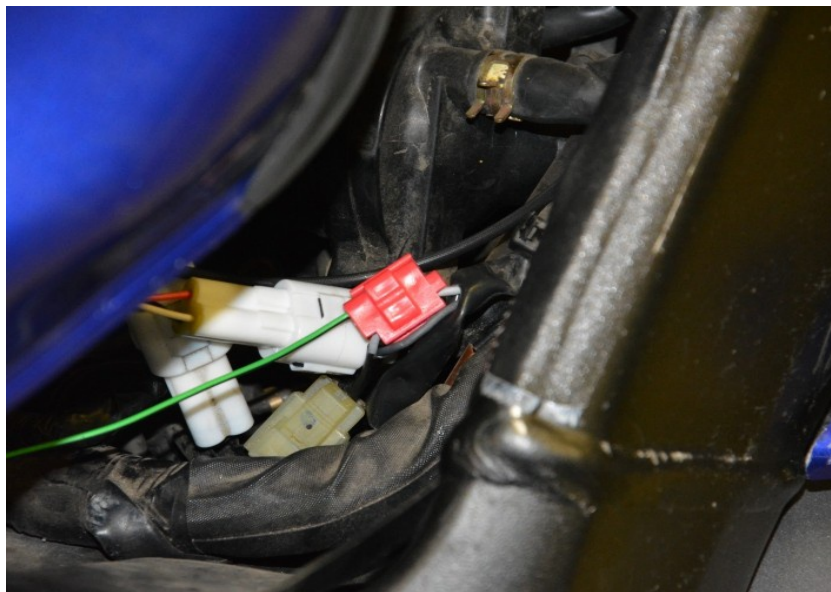

Connect the GPX Red wire to the Brown wire of the rear brakelight switch connector.

(Brown, 2-pole connector at the right side, below fuel tank.)

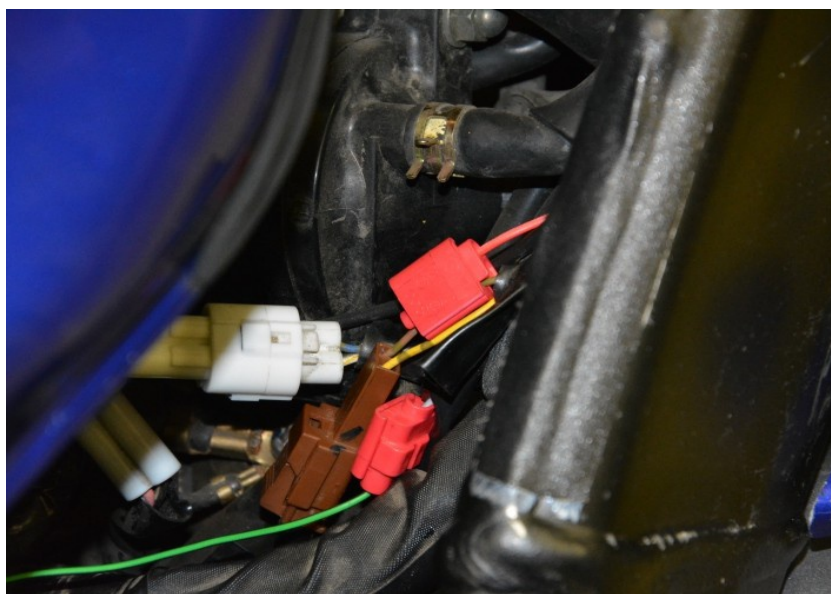

Typical position for the gear indicator.

Secure the unit properly.

