# **QuickShifter easy** Supplementary Manual



### KTM SMR 450 2004-2007 (iQSE-2 + QSH-CKP)

Secure the bike on a stand.



Remove the left and right side plastic covers.



Remove the the fuel tank.



## **QuickShifter easy** Supplementary Manual



#### KTM SMR 450 2004-2007 (iQSE-2 + QSH-CKP)

Connect the two QSH Green wires to the two wires of the crankshaft position sensor (CKP).

(2-pole, blue connector with Red and Green wires.)




Connect the QSH Black wire terminal to the ignition coil ground terminal.

Also connect the ignition coil ground terminal to the battery negative terminal.



Connect the QSH Red wire to the battery positive terminal via an on/off switch.

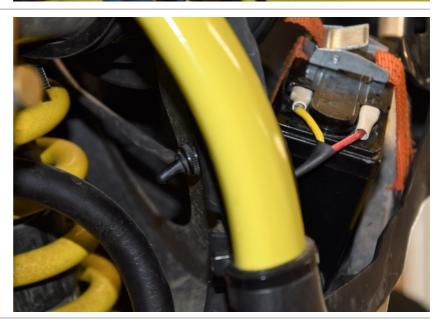

## **QuickShifter easy** Supplementary Manual



### KTM SMR 450 2004-2007 (iQSE-2 + QSH-CKP)

Mount the QSE sensor under the bolt of gearbox shaft.

(Replace the bolt with the one supplied. Place the conical washers at the two sides of the sensor like this: (0). Tighten the bolt in this position by about 6 Nm. If you do not have a torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit Properly.

