### **QuickShifter easy** Supplementary Manual




### Suzuki GSX250R ABS 2018-2021 (iQSE-1 + QSH-P2T)


Secure the bike on a stand.



Remove the seat and remove the fuel tank.

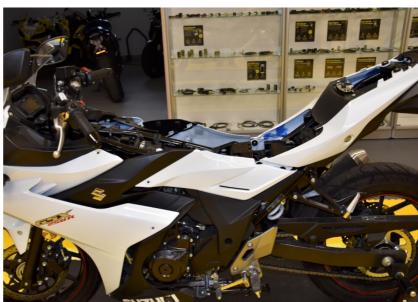

Locate the ignition coil connectors under the fuel tank.

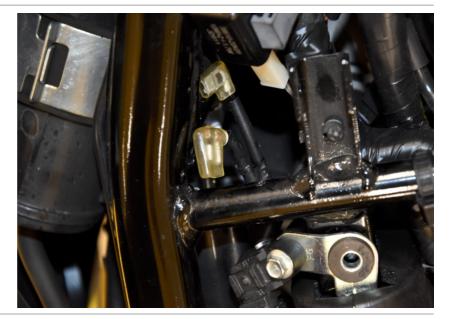

# **QuickShifter easy** Supplementary Manual



### Suzuki GSX250R ABS 2018-2021 (iQSE-1 + QSH-P2T)

Take off the Orange/Black terminal from one coil.

Connect the Orange/Black terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.

Splice the QSH White wire to the Black wire of the coil by using the supplied red wire tap connector.



Take off the Orange/Black terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Orange/Black terminal with tape.



Connect the QSH Black wire terminal to the battery negative terminal.




# **QuickShifter easy** Supplementary Manual



#### Suzuki GSX250R ABS 2018-2021 (iQSE-1 + QSH-P2T)

Mount the QSE sensor.

(Place the sensor in the rod as shown. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)

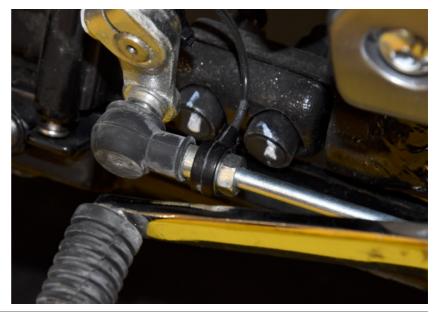

Typical position for the QuickShifter easy.

Secure the unit properly.

