

# QuickShifter easy Supplementary Manual



## Yamaha FZS600 Fazer 1998-2003 (iQSE-1 + QSH-P2T)

Remove the main seat.



Lift up or remove the fuel tank.



Take off the Red/Black terminal from one coil.

Connect the QSH Green terminal to this coil terminal.




# QuickShifter easy Supplementary Manual



## Yamaha FZS600 Fazer 1998-2003 (iQSE-1 + QSH-P2T)

Connect the Red/Black terminal to the QSH Red wire terminal and secure with tape.

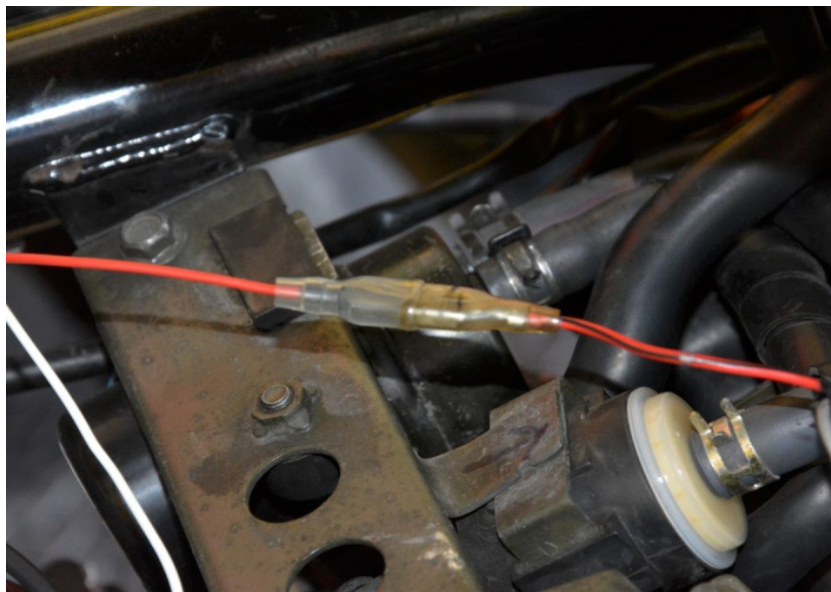

Take off the Red/Black terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Black/White terminal with tape.



Splice the QSH White wire to the Gray wire of the coil by using the supplied red wire tap connector.

*(Refer to the QSH-P2T instructions)*






# QuickShifter easy Supplementary Manual



## Yamaha FZS600 Fazer 1998-2003 (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the battery negative terminal.

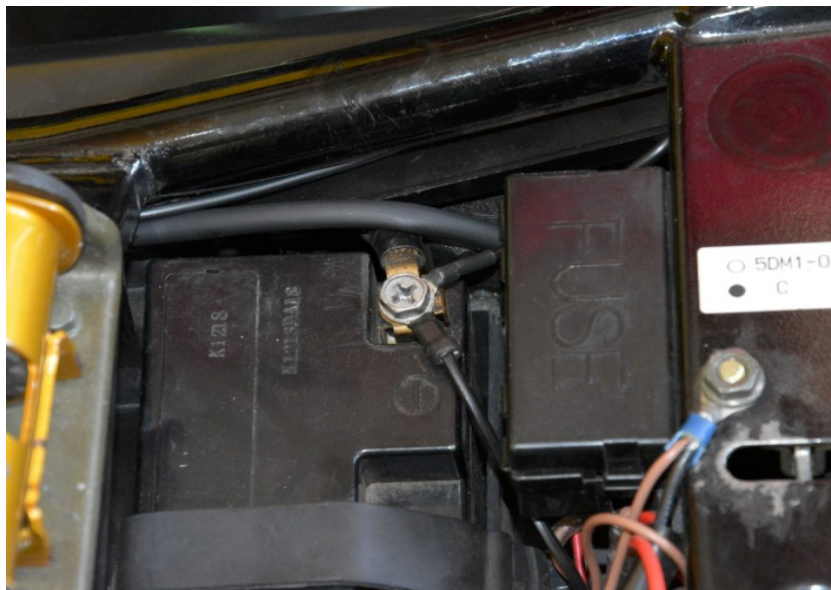

Mount the QSE sensor.

*(Replace the bolt with the one supplied.  
Place the conical washers at the two sides  
of the sensor like this: (O). Tighten the bolt  
in this position by about 6 Nm. If you do not  
have torque wrench, tighten the bolt until  
the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

