

QuickShifter easy Supplementary Manual



Yamaha FZS600 Fazer 1998-2003 (iQSE-1 + QSH-P2T)

Remove the main seat.



Lift up or remove the fuel tank.



Take off the Red/Black terminal from one coil.

Connect the QSH Green terminal to this coil terminal.



QuickShifter easy Supplementary Manual



Yamaha FZS600 Fazer 1998-2003 (iQSE-1 + QSH-P2T)

Connect the Red/Black terminal to the QSH Red wire terminal and secure with tape.



Take off the Red/Black terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Red/Black terminal with tape.



Splice the QSH White wire to the Gray wire of the coil by using the supplied red wire tap connector.

(Refer to the QSH-P2T instructions)




QuickShifter easy Supplementary Manual




Yamaha FZS600 Fazer 1998-2003 (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the battery negative terminal.

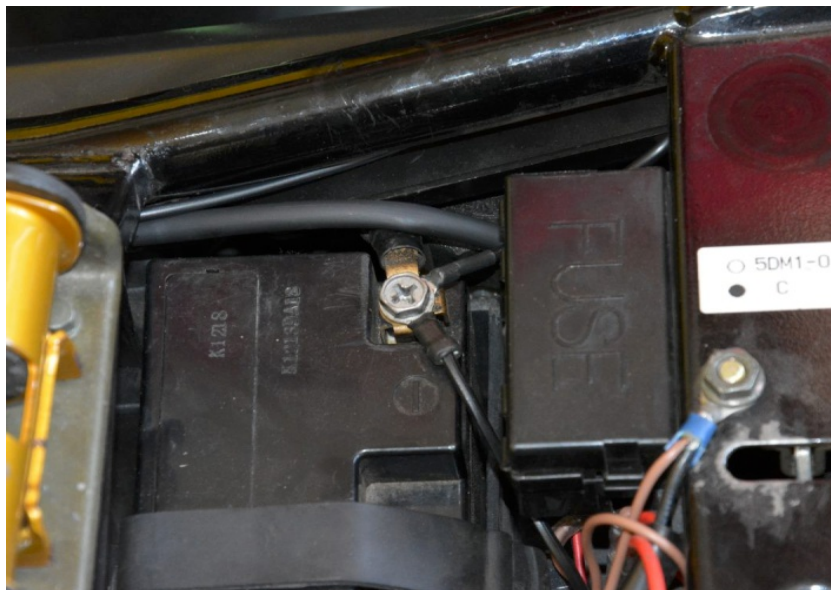

Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)

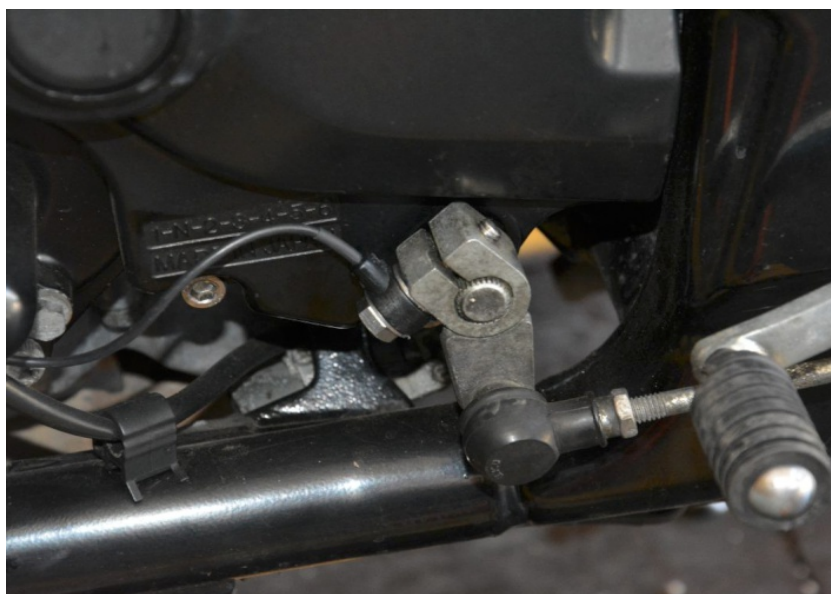

Typical position for the QuickShifter easy.

Secure the unit properly.

