

# QuickShifter easy Supplementary Manual



## Yamaha YZF-R125 2008-2013 (iQSE-1 + QSH-P2T)

Secure the bike on a stand.



Remove the seats.

Remove the black plastic covers below the fuel tank.

Remove the fuel tank cover and remove the fuel tank.

Remove the bellypan.




Locate the ignition coil connectors under the fuel tank.

Take off the Red/White terminal from the coil.

Connect the Red/White terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.

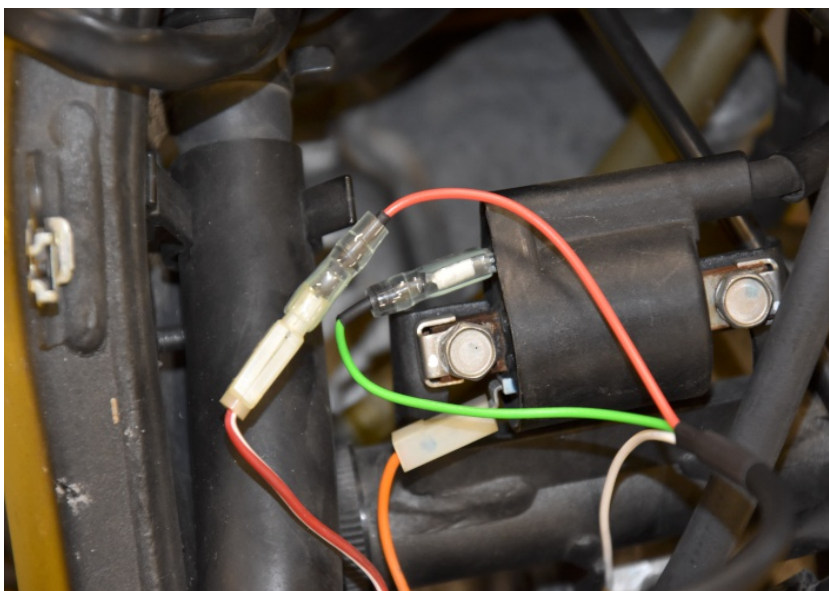


# QuickShifter easy Supplementary Manual




## Yamaha YZF-R125 2008-2013 (iQSE-1 + QSH-P2T)

Splice the QSH White wire to the Orange wire of the coil by using the supplied red wire tap connector.

Isolate the unused QSH Green wire terminal with tape.

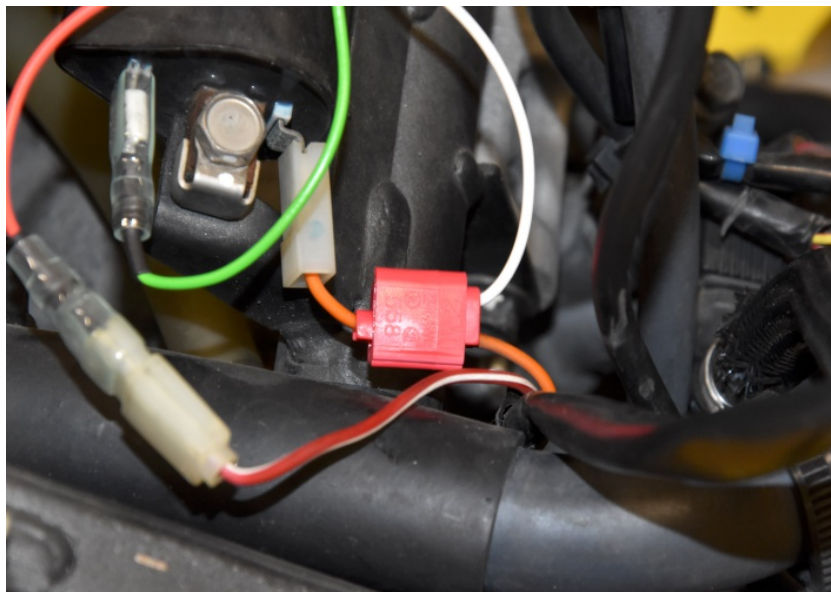

Connect the QSH Black wire terminal to the battery negative terminal.

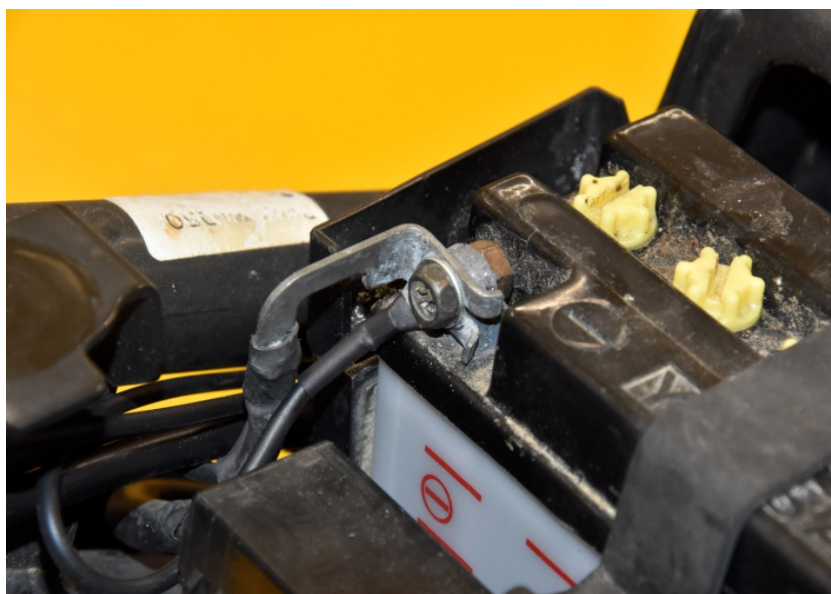

Mount the QSE sensor.

*(Replace the bolt with the one supplied. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*





# QuickShifter easy Supplementary Manual



## Yamaha YZF-R125 2008-2013 (iQSE-1 + QSH-P2T)

Typical position for the QuickShifter easy.

Secure the unit properly.

