# **QuickShifter easy** Supplementary Manual



### Yamaha YZF-R3 ABS 2015-2018 (iQSE-1 + QSH-P2T)

Secure the bike on a stand.



Remove the seats and the side fairings.

Remove the fuel tank cover and remove the fuel tank.



Locate the ignition coil terminals under the fuel tank.




## **QuickShifter easy** Supplementary Manual



#### Yamaha YZF-R3 ABS 2015-2018 (iQSE-1 + QSH-P2T)

Splice the QSH White wire to the Orange wire of the coil by using the supplied red wire tap connector.

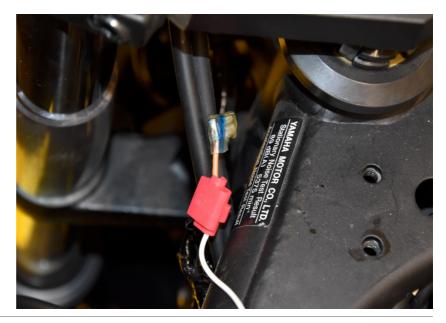

Take off the Red/Black terminal from the coil.

Connect the Red/Black terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.



Take off the Red/Black terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Red/Black terminal with tape.



## **QuickShifter easy** Supplementary Manual



#### Yamaha YZF-R3 ABS 2015-2018 (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the chassis ground terminal.



Mount the QSE sensor.

(Place the sensor in the rod as shown. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)



Typical position for the QuickShifter easy.

Secure the unit properly.

