

Aprilia RSV4 ABS TC 2021- (SH-CAN)

Secure the bike on a stand.




Remove the seats.

Remove the plastic cover from the fuel tank.


Lift up the fuel tank.

Locate the ABS connector under the fuel tank on the right side.

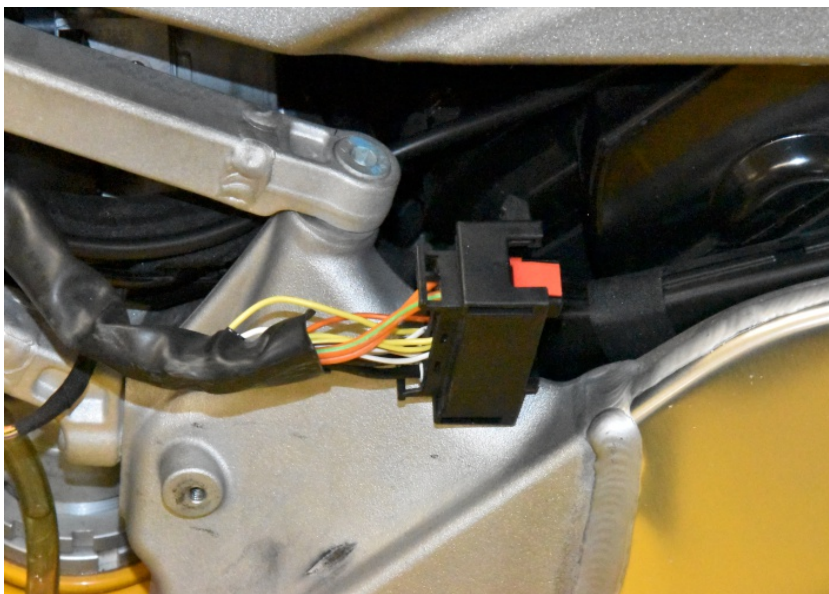

Cut the Yellow wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Yellow wire end, which goes to the ABS module. Use a yellow butt connector.

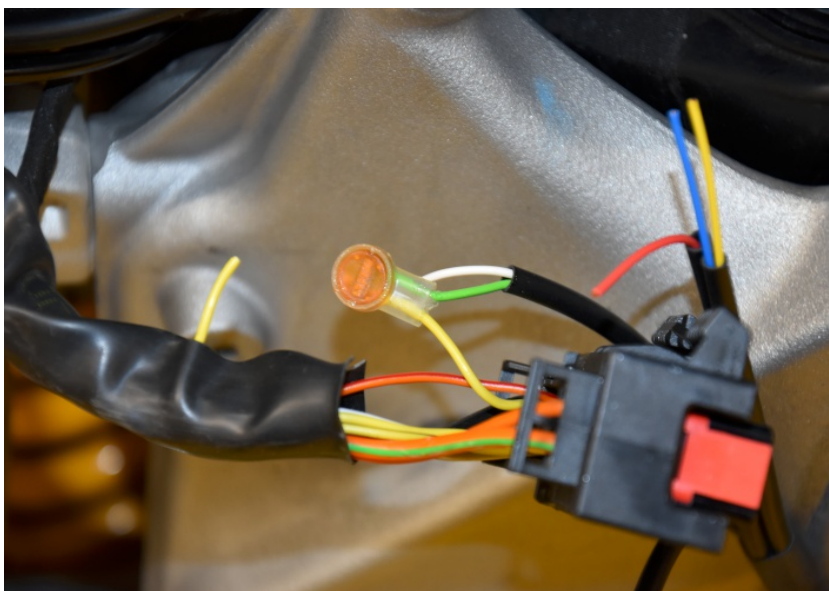


SpeedoHealer CAN

Supplementary Manual




Aprilia RSV4 ABS TC 2021- (SH-CAN)

Connect the SH Blue wire to the Yellow wire end, which is at the wiring harness side. Use a yellow butt connector.

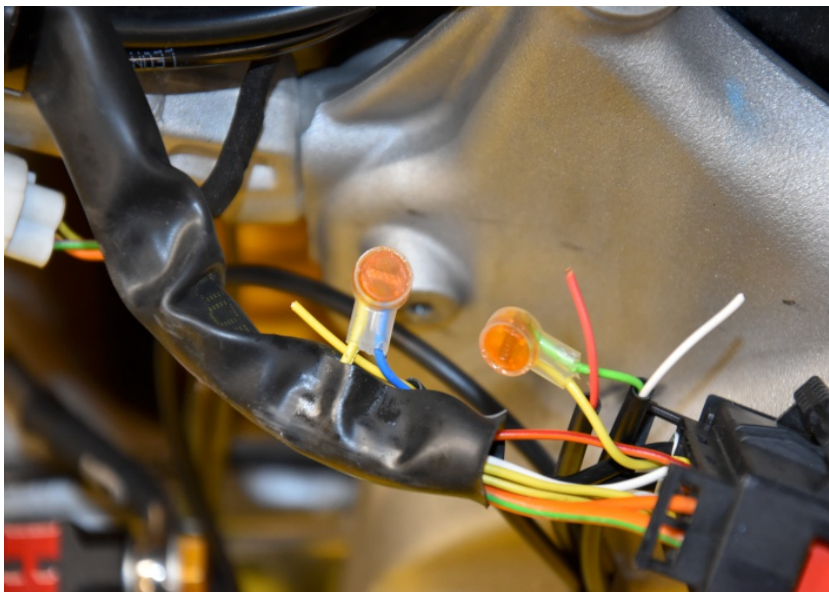


Cut the White wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White wire end, which goes to the ABS module. Use a yellow butt connector.

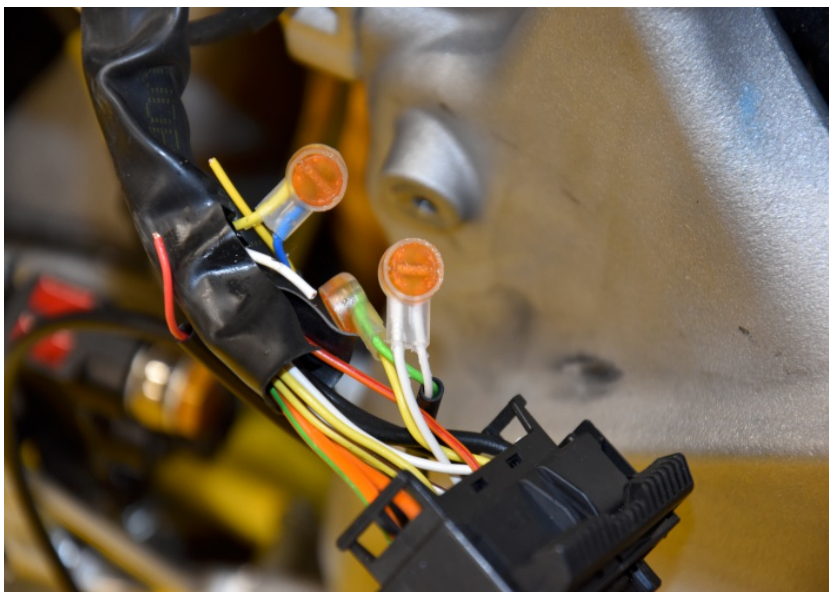

Connect the SH Yellow wire to the White wire end, which is at the wiring harness side. Use a yellow butt connector.

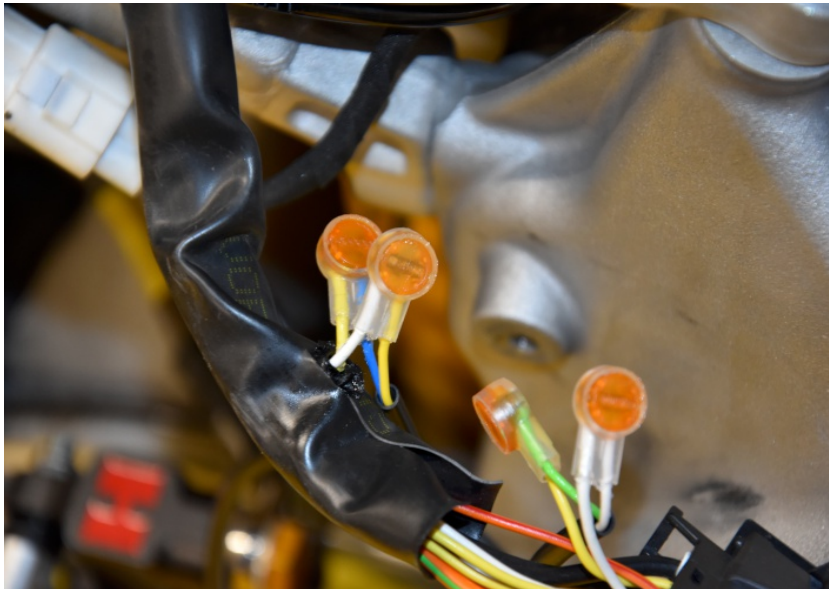


SpeedoHealer CAN

Supplementary Manual



Aprilia RSV4 ABS TC 2021- (SH-CAN)

Splice the SH Red wire to the Orange/Red wire of the ABS connector. Use a red wire tap connector.

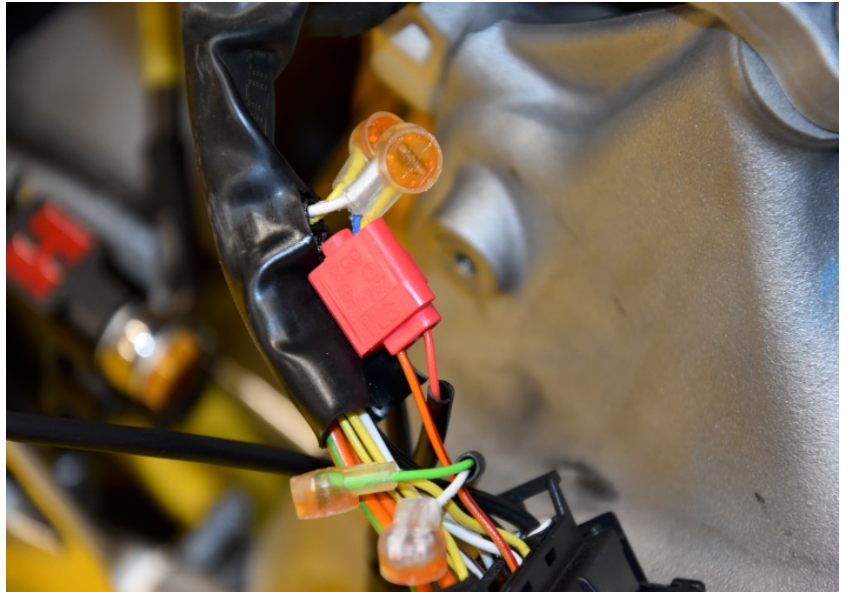

Splice the SH Black wire to the Blue wire of the fuel pump connector. Use a red wire tap connector.



Typical position for the SpeedoHealer CAN.

Secure the unit properly.

