

X-TRE Power Box Supplementary Manual



Suzuki DL1000 V-Strom 2014- (XT-S01)

Remove the seat.



Remove the side covers from fuel tank.



Remove the fuel tank.



X-TRE Power Box Supplementary Manual



Suzuki DL1000 V-Strom 2014- (XT-S01)

Plug the X-TRE connectors in-line with the gear position sensor connectors.


(White, 3-pole triangular connectors below the fuel tank on the right side)



Cut the Black/Green wire about 4cm (1.6") away from the ECM connector.

Connect the X-TRE Black/Green wire to the Black/Green wire end, which goes to the ECU/ECM connector.

(Black connector, PIN #6)

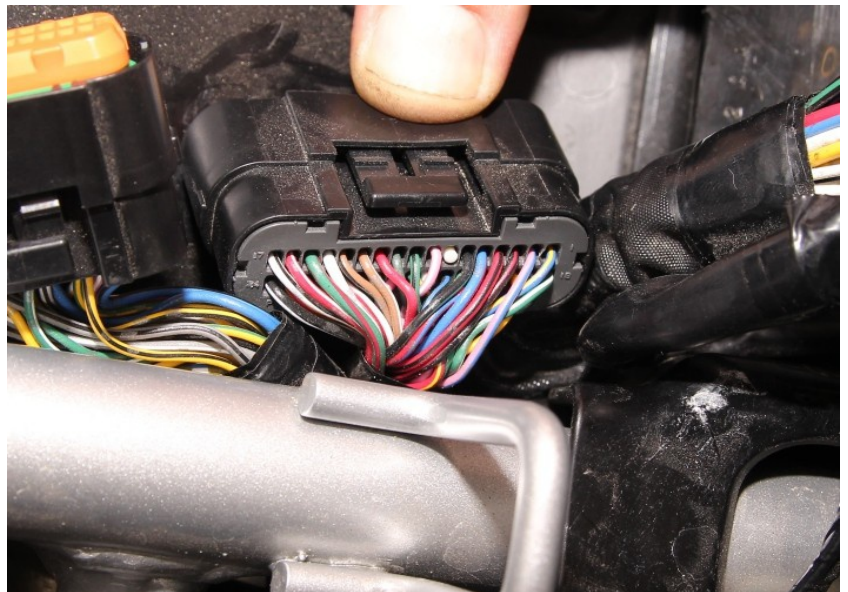

Connect the X-TRE Black/White wire to the Black/Green wire end, which is at the wiring harness side.



X-TRE Power Box


Supplementary Manual



Suzuki DL1000 V-Strom 2014- (XT-S01)

Connect the X-TRE Red wire to the Orange wire of the rear brake light switch connector.

(Transparent, 2-pole connector below the seat)

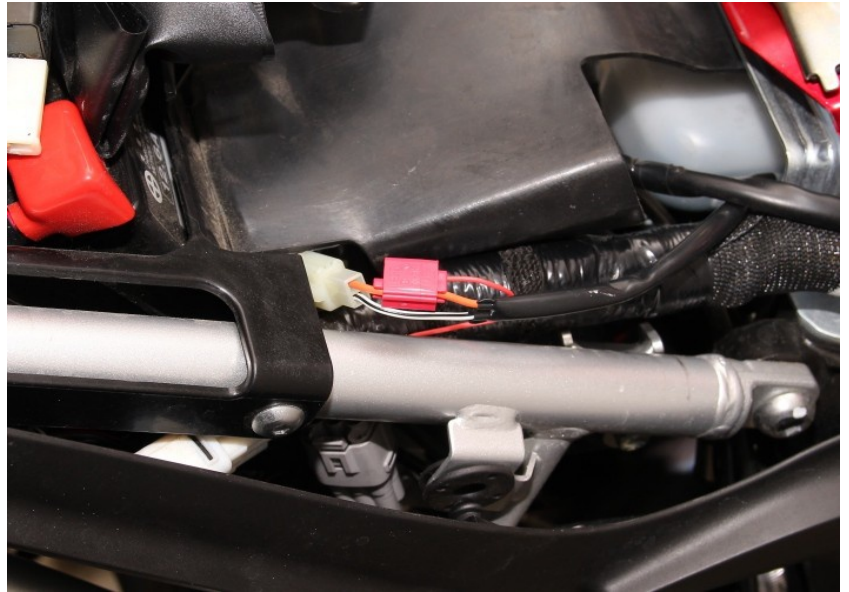

Mount the X-TRE box to the inner side of the side fairing by the supplied Velcro strips, and secure the box and cables with cable ties.

