


X-TRE Power Box Supplementary Manual



Suzuki GSR600 2006-2011 (XT-S01)

Remove the main seat.

Remove the black frame covers from the left and the right side below the seat.

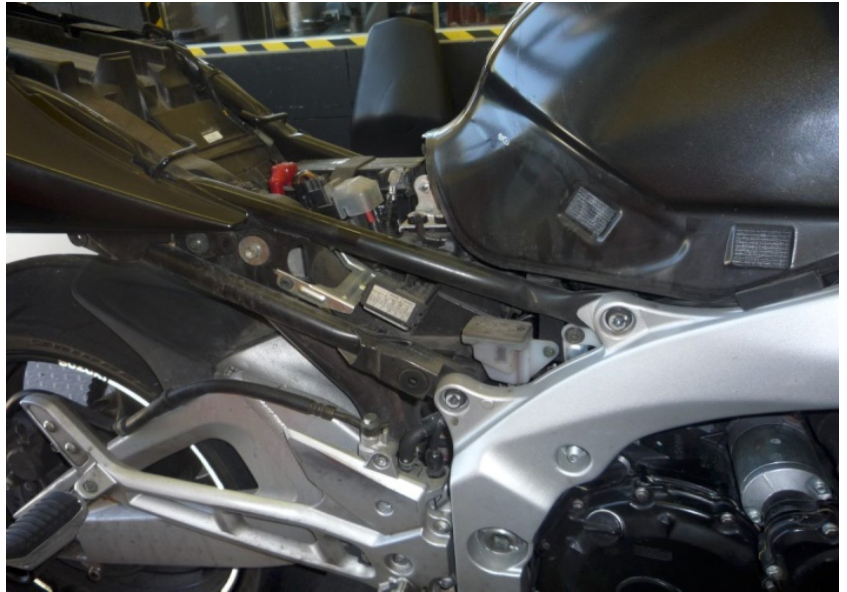

Remove the black cover from the ignition switch.

Remove the fairings with the indicator from the left and the right side.



Lift up or remove the fuel tank.



X-TRE Power Box Supplementary Manual



Suzuki GSR600 2006-2011 (XT-S01)

Plug the X-TRE connectors in-line with the gear position sensor connectors.

Mount the X-TRE box to the inner side of the frame by the supplied Velcro strips, and secure the box and cables with cable ties.

(White, 3-pole triangular connectors below the fuel tank at the left side)



Cut the Black/Green wire about 4cm (1.6") away from the ECM connector.

Connect the X-TRE Black/Green wire to the Black/Green wire end, which goes to the ECM connector.

Connect the X-TRE Black/White wire to the Black/Green wire end, which is at the wiring harness side.

(Large connector, PIN #6)



Connect the X-TRE Red wire to the Orange wire of the rear brake light switch connector.

(Transparent, 2-pole connector below the fuel tank)

(X-TRE mode: 6)

