

X-TRE Power Box Supplementary Manual



Suzuki GSX-S1000F 2015-2016 (XT-S01)

Remove the main and passanger seat.



Remove the side covers from the fuel tank.



Remove the covers from the top of the side fairings.




X-TRE Power Box Supplementary Manual



Suzuki GSX-S1000F 2015-2016 (XT-S01)


Remove the cover from the front of the fuel tank.

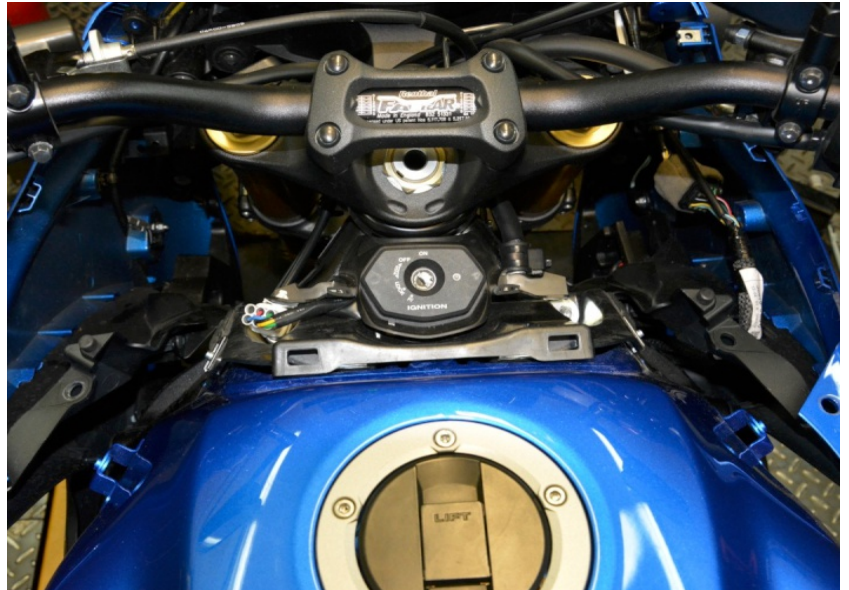

Remove the ignition switch cover.



Remove the fuel tank.

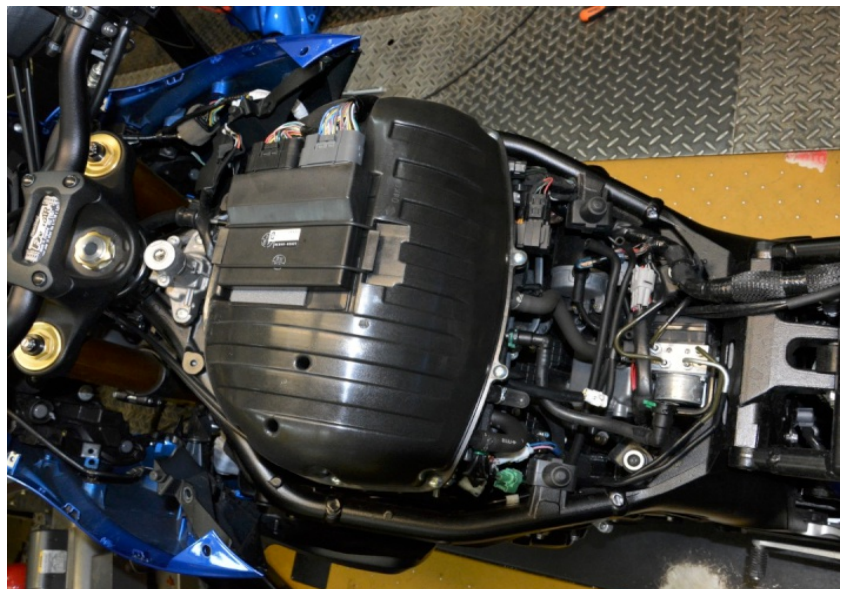

X-TRE Power Box

Supplementary Manual



Suzuki GSX-S1000F 2015-2016 (XT-S01)

Plug the X-TRE connectors in-line with the gear position sensor connectors.

(White, 3-pole triangular connectors below the fuel tank at the left side)



Mount the X-TRE box to the inner side of the frame by the supplied Velcro strips, and secure the box and the cables with the cable ties.



Cut the Black/Green wire about 4cm (1.6") away from the ECM connector.

Connect the X-TRE Black/Green wire to the Black/Green wire end, which goes to the ECM connector.

(Black connector, PIN #6)




X-TRE Power Box

Supplementary Manual



Suzuki GSX-S1000F 2015-2016 (XT-S01)

Connect the X-TRE Black/White wire to the Black/Green wire end, which is at the wiring harness side.

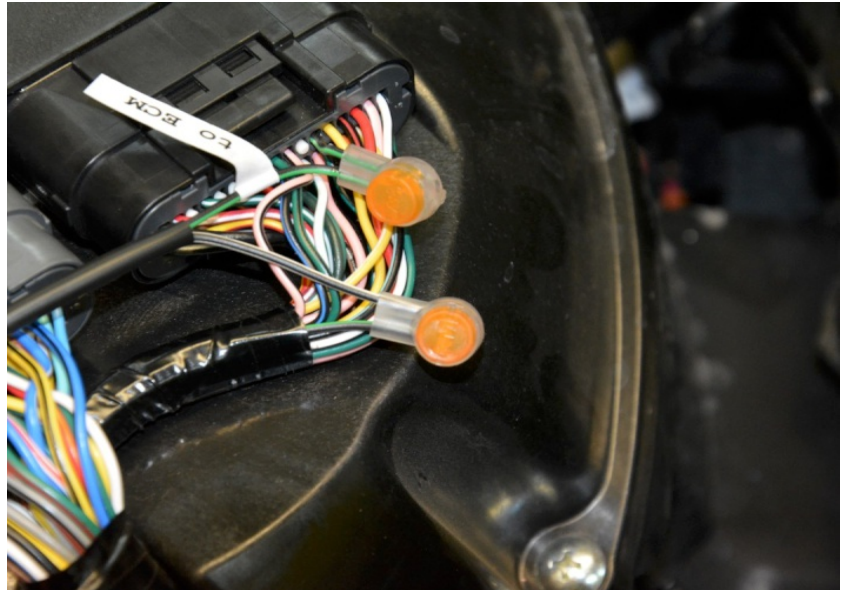

Connect X-TRE Red wire to Orange wire of rear brake light switch connector.

(Transparent, 2-pole connector below the fuel tank)

